

# User Manual

---



---

60888984\_00

**JXM-IO-EX35**  
Expansion module

This document has been compiled by Bucher Automation AG with due diligence based on the state of the art as known to them. Any revisions and technical advancements of our products are not automatically made available in a revised document.

The Bucher Automation AG shall not be liable for any errors either in form or content, or for any missing updates, as well as for any damage or detriment resulting from such failure.



**Bucher Automation AG**

Thomas-Alva-Edison-Ring 10  
71672 Marbach/Neckar, Germany  
T +49 7141 2550-0  
[info@bucherautomation.com](mailto:info@bucherautomation.com)

Technical support

T +49 7141 2550-444  
[support@bucherautomation.com](mailto:support@bucherautomation.com)

Sales

T +49 7141 2550-663  
[sales@bucherautomation.com](mailto:sales@bucherautomation.com)

[www.bucherautomation.com](http://www.bucherautomation.com)

Translation of the german original User Manual

|               |           |
|---------------|-----------|
| Revision      | 1.00      |
| Date of issue | 8/24/2026 |

# Table of contents

|          |                                                                      |           |
|----------|----------------------------------------------------------------------|-----------|
| <b>1</b> | <b>Introduction.....</b>                                             | <b>5</b>  |
| 1.1      | Document Information .....                                           | 5         |
| 1.2      | Typographical conventions.....                                       | 5         |
| <b>2</b> | <b>Security .....</b>                                                | <b>6</b>  |
| 2.1      | General.....                                                         | 6         |
| 2.2      | Purpose .....                                                        | 6         |
| 2.2.1    | Intended use.....                                                    | 6         |
| 2.2.2    | Use Not in Accordance with Intended Purpose .....                    | 6         |
| 2.3      | Warnings Used .....                                                  | 7         |
| 2.4      | Safety-related torque-off.....                                       | 7         |
| <b>3</b> | <b>Product Description .....</b>                                     | <b>9</b>  |
| 3.1      | Design .....                                                         | 9         |
| 3.2      | Product features .....                                               | 10        |
| 3.3      | Diagnostic capability via LEDs .....                                 | 10        |
| 3.4      | Nameplate .....                                                      | 12        |
| 3.5      | Scope of delivery .....                                              | 13        |
| <b>4</b> | <b>Technical Specifications.....</b>                                 | <b>14</b> |
| 4.1      | Dimensions.....                                                      | 14        |
| 4.2      | Mechanical specifications.....                                       | 15        |
| 4.3      | Electrical properties .....                                          | 15        |
| 4.4      | Environmental conditions .....                                       | 16        |
| 4.5      | EMI values.....                                                      | 16        |
| 4.6      | Outputs.....                                                         | 18        |
| 4.6.1    | Half-bridge outputs .....                                            | 19        |
| 4.6.2    | Current diagnostics at the outputs.....                              | 20        |
| 4.6.3    | Overcurrent trip at outputs.....                                     | 21        |
| 4.7      | Inputs.....                                                          | 21        |
| <b>5</b> | <b>Mechanical installation .....</b>                                 | <b>23</b> |
| 5.1      | Requirements for the Installation Location and Mounting Surface..... | 24        |
| 5.2      | Mounting orientation .....                                           | 24        |
| 5.3      | Installing the expansion module .....                                | 25        |
| <b>6</b> | <b>Electrical connection .....</b>                                   | <b>26</b> |
| 6.1      | Pin assignment.....                                                  | 27        |
| 6.1.1    | 4-pin Deutsch ports .....                                            | 27        |
| 6.2      | Connecting 2-wire digital sensors.....                               | 32        |
| 6.3      | Connecting 3-wire digital sensors.....                               | 34        |

|           |                                                                   |           |
|-----------|-------------------------------------------------------------------|-----------|
| <b>7</b>  | <b>Identification and Configuration .....</b>                     | <b>36</b> |
| 7.1       | Identification .....                                              | 36        |
| 7.1.1     | Device information.....                                           | 36        |
| 7.1.2     | Electronic Data Sheet (EDS).....                                  | 36        |
| 7.2       | Operating system .....                                            | 37        |
| 7.2.1     | Operating System Update of the Expansion Module.....              | 38        |
| <b>8</b>  | <b>Parameterization.....</b>                                      | <b>40</b> |
| 8.1       | Concept and control .....                                         | 40        |
| 8.1.1     | Configuration options of connections .....                        | 40        |
| 8.1.2     | I/O ports and SDO map .....                                       | 41        |
| 8.1.3     | Overview – I/O interfaces .....                                   | 42        |
| 8.1.4     | Parameters, values and statuses .....                             | 47        |
| 8.2       | Setting the node ID .....                                         | 52        |
| 8.3       | Diagnostic information.....                                       | 53        |
| 8.4       | Saving settings permanently and resetting to default values ..... | 54        |
| 8.5       | System parameters .....                                           | 55        |
| 8.6       | Mapping of Process Data Objects (PDOs).....                       | 55        |
| 8.6.1     | RPDO communication parameters.....                                | 56        |
| 8.6.2     | TPDO communication parameters .....                               | 57        |
| 8.6.3     | Mapping tables .....                                              | 57        |
| 8.6.4     | Sending interface input values via TPDO.....                      | 58        |
| 8.7       | Frequency measurement at the digital inputs.....                  | 59        |
| 8.8       | Acquisition of encoder signals .....                              | 59        |
| 8.9       | NMT commands .....                                                | 61        |
| 8.10      | Troubleshooting.....                                              | 62        |
| 8.10.1    | Heartbeat.....                                                    | 63        |
| 8.11      | Current control with PID controller.....                          | 64        |
| 8.11.1    | Test scenario .....                                               | 64        |
| 8.11.2    | Current measurement at the PWMi_H3_X outputs .....                | 67        |
| 8.12      | Dither technology for controlling hydraulic valves .....          | 67        |
| <b>9</b>  | <b>Maintenance.....</b>                                           | <b>69</b> |
| 9.1       | Repairs .....                                                     | 69        |
| 9.2       | Storage and Shipment.....                                         | 69        |
| 9.3       | Return and Disposal .....                                         | 69        |
| <b>10</b> | <b>Service.....</b>                                               | <b>71</b> |
| 10.1      | Technical Support.....                                            | 71        |
| <b>11</b> | <b>Replacement Parts and Accessories.....</b>                     | <b>72</b> |
| 11.1      | Accessories .....                                                 | 72        |

# 1 Introduction

## 1.1 Document Information

This document is part of the product and must be read and understood before using the device. It contains important and safety-related information to ensure that the product is used properly and in accordance with its intended purpose.

### Target audiences

This document is intended for qualified personnel.

The device must only be put into operation by qualified and trained personnel.

Safe use of the device must be ensured throughout every stage of its life cycle. A lack of or insufficient technical and documentation knowledge will result in the loss of any liability claims.

### Availability of information

Ensure that this information is readily available near the product throughout its entire service life.

Please check the Downloads section of our website for updates and the latest version of the document. This document is not subject to automatic version control.

For further information refer to the following information products:

- Online help for the JetSym software  
Functions of software products with application examples
- Application-oriented manuals  
Product-independent documentation
- Version  
Updates: Information about changes to the software products and your device's operating system



### Info

#### Further information

For more information on system immunity to interference, please refer to Application Note 016 *EMC-Compliant Control Cabinet Installation* at [www.bucherautomation.com](http://www.bucherautomation.com).

## 1.2 Typographical conventions

This manual uses different typographical effects to support you in finding and classifying information. Below, there is an example of a step-by-step instruction:

- ✓ This symbol indicates requirements which have to be met before executing the following action.
- ▶ This sign or a numbering at the beginning of a paragraph marks an action instruction that must be executed by the user. Execute the instructions one after the other.
- ⇒ The target after a list of instructions indicates reactions to, or results of these actions.



### Info

#### Further information and practical tips

In the info box you will find helpful information and practical tips about your product.

## 2 Security

### 2.1 General

At the time of its introduction to the market, the product reflects the current state of science and technology. In addition to the operating instructions, the laws, regulations, and guidelines of the country of use or the EU apply to the operation of the product. The operator is responsible for complying with the relevant accident prevention regulations and generally accepted safety standards.

### 2.2 Purpose

#### 2.2.1 Intended use

This module is for adding multifunctional inputs and outputs to controllers.

Operate the device only in accordance with the intended conditions of use and within the limits set forth in the technical specifications.

Intended use of the product includes its operation in accordance with this manual.

#### **SELV**

Due to its low operating voltage, the device falls under the Safety Extra Low Voltage category and is therefore not subject to the EU Low Voltage Directive. The device must be powered only from a SELV source.

#### 2.2.2 Use Not in Accordance with Intended Purpose

Do not use the device in technical systems that require a high level of reliability.

#### **Machinery Directive**

This device is not a safety component as defined by the Machinery Directive 2006/42/EC.

## 2.3 Warnings Used

### **DANGER**



#### **High risk**

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

### **WARNING**



#### **Medium risk**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

### **CAUTION**



#### **Low risk**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

### **NOTICE**



#### **Material damage**

Indicates a situation which, if not avoided, could result in malfunctions or material damage.

## 2.4 Safety-related torque-off

The JXM-IO-EX35 itself was **not** designed to functional safety requirements.

However, the system meets performance level b requirements as per ISO 13849 by means of a safety relay that provides for external shut-down of the actuator supply voltage (VBAT\_PWR).

### **CAUTION**



#### **Safe torque-off disabled**

The occurrence of a single error can disable the safe torque-off function.  
The maximum achievable performance level according to ISO 13849 is PL b.

- ▶ Take the necessary precautions to meet PL b level requirements according to ISO 13849.

Take the precautions detailed below to meet PL b level requirements according to ISO 13849.

Take the following precautions to meet performance level b:

- Observe the MTTF value of the JXM-IO-EX35 (87 years).
- On the application side, define whether the following is required: single- or dual-channel control, manual or automatic startup, and cross-fault detection.
- Use a safety relay meeting performance level b requirements at the minimum.
- Use a safety relay with contacts designed to support the current load levels generated by the JXM-IO-EX35.
- Wire the safety relay according to the instructions detailed in the respective manual.
- Back up the maximum current carrying capacity by upstream overcurrent protection devices.
- To ensure external actuator supply voltage cut-off, always shut off both pins **X2:1** and **X2:2**.
- Validate the proper functioning of the safety feature during commissioning and document the results.
- At regular intervals (e.g. once a year), test the safety feature for correct functioning and document the results.

### Wiring example

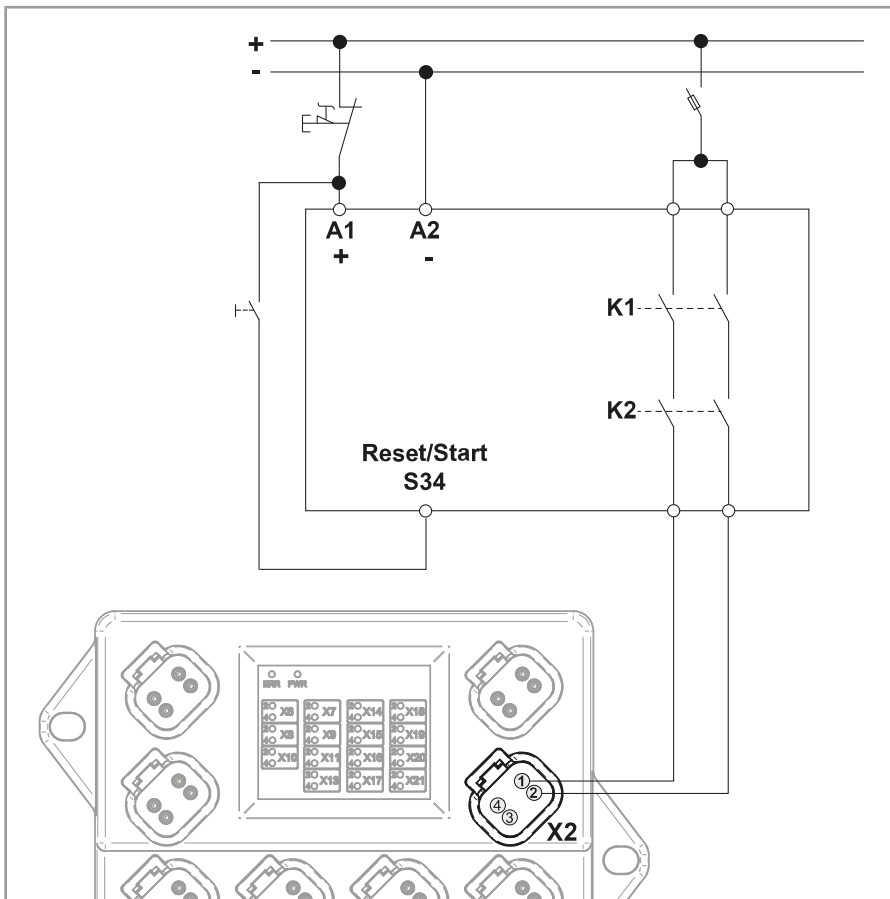


Fig. 1: Safety relay wiring example

| Pin  | Signal   |
|------|----------|
| X2:1 | VBAT_PWR |
| X2:2 | VBAT_PWR |
| X2:3 | GND_PWR  |
| X2:4 | GND_PWR  |

Tab. 1: Connection X2 – VBAT\_IN

### 3 Product Description

The JXM-IO-EX35 expansion module is a universal building block for remote I/Os on mobile machines. With its I/ O configuration, it can take on virtually all distributed tasks.

#### 3.1 Design

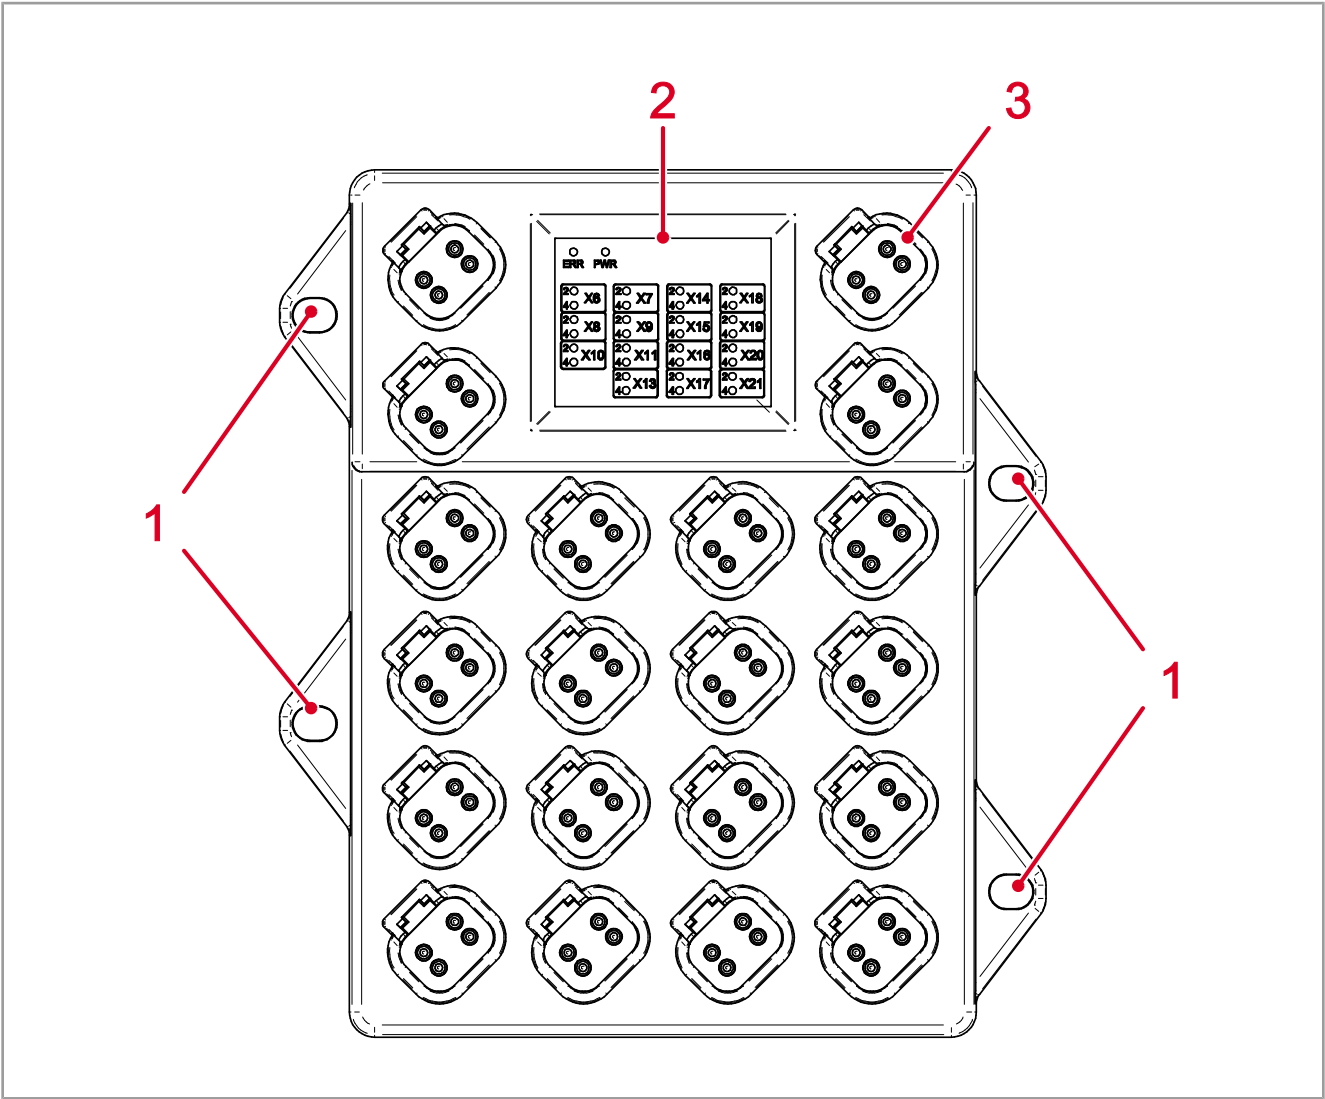


Fig. 2: Design

|   |                                  |
|---|----------------------------------|
| 1 | Fastening lugs                   |
| 2 | Error and status LEDs [ ▶ 10]    |
| 3 | 4-pin DEUTSCH connectors [ ▶ 27] |

## 3.2 Product features

- 1 CAN port, CAN 2.0
- 4 analog inputs for current or voltage measurement
- 4 digital inputs for use as digital, frequency, period, or counter inputs
- 4 half-bridge PWM outputs, 12 A, with current monitoring (fmax = 5 kHz)
- 16 PWM outputs up to 3 A
- Sensor supply 10 V/100 mA
- 2 monitored supply voltages for sensors (battery voltage)
- 2 tristate configuration pins for setting the CAN node ID in the wiring harness
- Separate UB connections for logic and output driver power supplies
- Total current output up to 26 A at 85 °C

## 3.3 Diagnostic capability via LEDs

The node features 2 status LEDs (red and green) signaling different status and error conditions, and another 30 orange LEDs displaying the status of the individual ports.

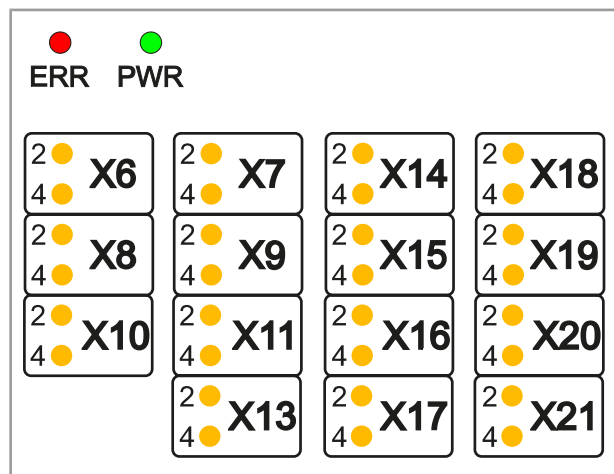


Fig. 3: LED indicators

### Blinking patterns of the red and green LEDs

| Red LED                                                                             | Green LED                                                                           | Description                                                                                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
|  |  | <ul style="list-style-type: none"> <li>– Operating voltage is present (VBAT_ECU).</li> <li>– The bootloader is not being executed.</li> </ul>             |
| ON                                                                                  | OFF                                                                                 |                                                                                                                                                           |
|  |  | <ul style="list-style-type: none"> <li>– The bootloader is being executed.</li> <li>– The device has no firmware.</li> </ul>                              |
| ON/OFF:<br>200 ms                                                                   | OFF                                                                                 |                                                                                                                                                           |
|  |  | <ul style="list-style-type: none"> <li>– The start process was completed without errors.</li> <li>– The device is in the <b>Stopped</b> state.</li> </ul> |
| ON/OFF:<br>400 ms                                                                   | OFF                                                                                 |                                                                                                                                                           |

| Red LED                                                                                | Green LED                                                                            | Description                                                                                                                                                                                                               |
|----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                        |                                                                                      |                                                                                                                                                                                                                           |
|       |     | <ul style="list-style-type: none"><li>– The start process was completed without errors.</li><li>– The device is in the <b>Pre-Operational</b> state.</li></ul>                                                            |
| OFF                                                                                    | ON/OFF:<br>200 ms                                                                    |                                                                                                                                                                                                                           |
|                                                                                        |                                                                                      |                                                                                                                                                                                                                           |
|       |     | <ul style="list-style-type: none"><li>– The start process was completed without errors.</li><li>– The device is in the <b>Operational</b> state.</li></ul>                                                                |
| OFF                                                                                    | ON:<br>200 ms                                                                        |                                                                                                                                                                                                                           |
|                                                                                        | OFF:<br>600 ms                                                                       |                                                                                                                                                                                                                           |
|                                                                                        |                                                                                      |                                                                                                                                                                                                                           |
|       | 3x  | <ul style="list-style-type: none"><li>– The start process was completed without errors.</li><li>– The device is in calibration mode.</li></ul>                                                                            |
| OFF                                                                                    | 3x ON/<br>OFF:<br>200 ms                                                             |                                                                                                                                                                                                                           |
|                                                                                        | Pause:<br>400 ms                                                                     |                                                                                                                                                                                                                           |
|                                                                                        |                                                                                      |                                                                                                                                                                                                                           |
|     |   | <ul style="list-style-type: none"><li>– The device is in the <b>Bus Off</b> state.</li><li>– Bus communication is not possible.</li><li>– There is a wiring error.</li></ul>                                              |
| ON: 200 ms<br>OFF: 400 ms                                                              |                                                                                      |                                                                                                                                                                                                                           |
|                                                                                        |                                                                                      |                                                                                                                                                                                                                           |
| 3x  |   | Measured values are outside their specified ranges. The following errors may have occurred: <ul style="list-style-type: none"><li>– The PCB temperature is too high.</li><li>– The CPU temperature is too high.</li></ul> |
| 3x ON/OFF:<br>200 ms                                                                   | ON/OFF:<br>400 ms                                                                    |                                                                                                                                                                                                                           |

### Blinking pattern of the orange LEDs

| Orange LED                                                                          | Description                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>I/O signal is active:</p> <ul style="list-style-type: none"> <li>– Current input: Current applies</li> <li>– Voltage input: voltage applies</li> <li>– PNP input: H level</li> <li>– NPN input: L level</li> <li>– PWM output: Duty cycle &gt; 0 %</li> <li>– Digital output: H level</li> </ul> |
| ON                                                                                  |                                                                                                                                                                                                                                                                                                     |
| ○                                                                                   | I/O signal is not active:                                                                                                                                                                                                                                                                           |

| Orange LED                                      | Description                                                                                                                                                                                                                                                                                               |
|-------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFF                                             | <div><div></div><div><ul style="list-style-type: none"><li>– Current input: Current does not apply</li><li>– Voltage input: Voltage does not apply</li><li>– PNP input: L level</li><li>– NPN input: H level</li><li>– PWM output: Duty cycle = %</li><li>– Digital output: L level</li></ul></div></div> |
| <div><div></div><div>ON/OFF: 200 ms</div></div> | <div><div>I/O error:<br/>ERROR<br/>CONFIG<br/>OVERVOLTAGE<br/>OVERCURRENT<br/>SUPPLY_FAULT<br/>VEXT_SEN<br/>OPEN_CIRCUIT<br/>CC_UNLOCK</div></div>                                                                                                                                                        |

**i Info**

**Diagnosing LED malfunction**

During bootup all orange LEDs light up for 2 seconds and turn out for 1 second. This behavior allows you to diagnose any malfunction of the LEDs.

**3.4 Nameplate**

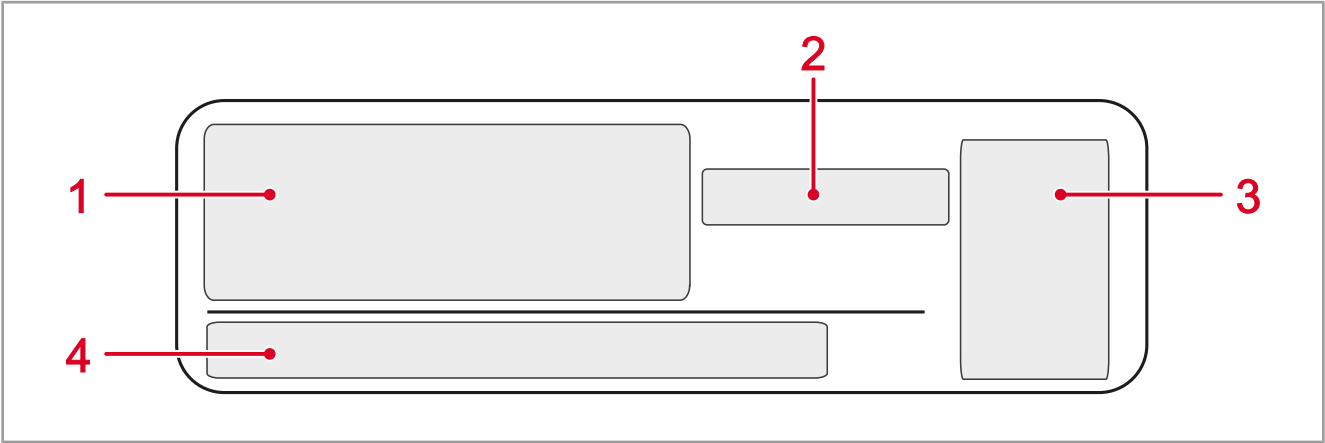


Fig. 4: Nameplate 1

|   |                     |
|---|---------------------|
| 1 | Company logo        |
| 2 | Registration number |
| 3 | Certification mark  |
| 4 | Model code number   |

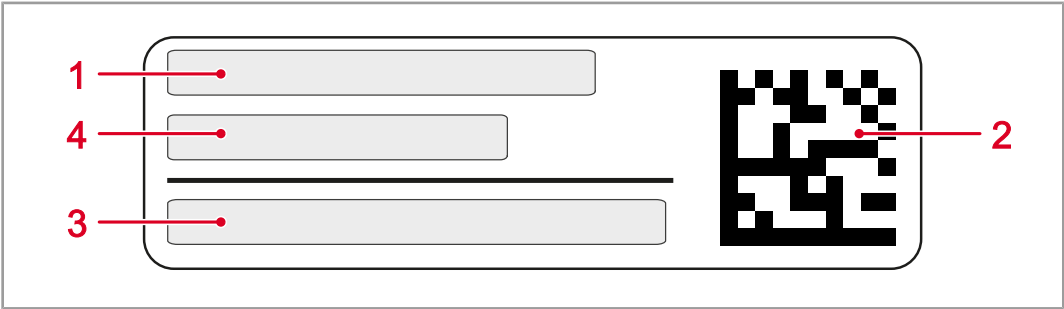


Fig. 5: Nameplate 2

|   |                   |
|---|-------------------|
| 1 | Item number       |
| 2 | Data matrix code  |
| 3 | Serial number     |
| 4 | Hardware revision |

3.5 Scope of delivery

| Scope of delivery | Item number | Quantity |
|-------------------|-------------|----------|
| JXM-IO-EX35       | 10002989    | 1        |

# 4 Technical Specifications

This chapter contains the electrical and mechanical specifications, as well as the operating data, for the JXM-IO-EX35 device.

## 4.1 Dimensions

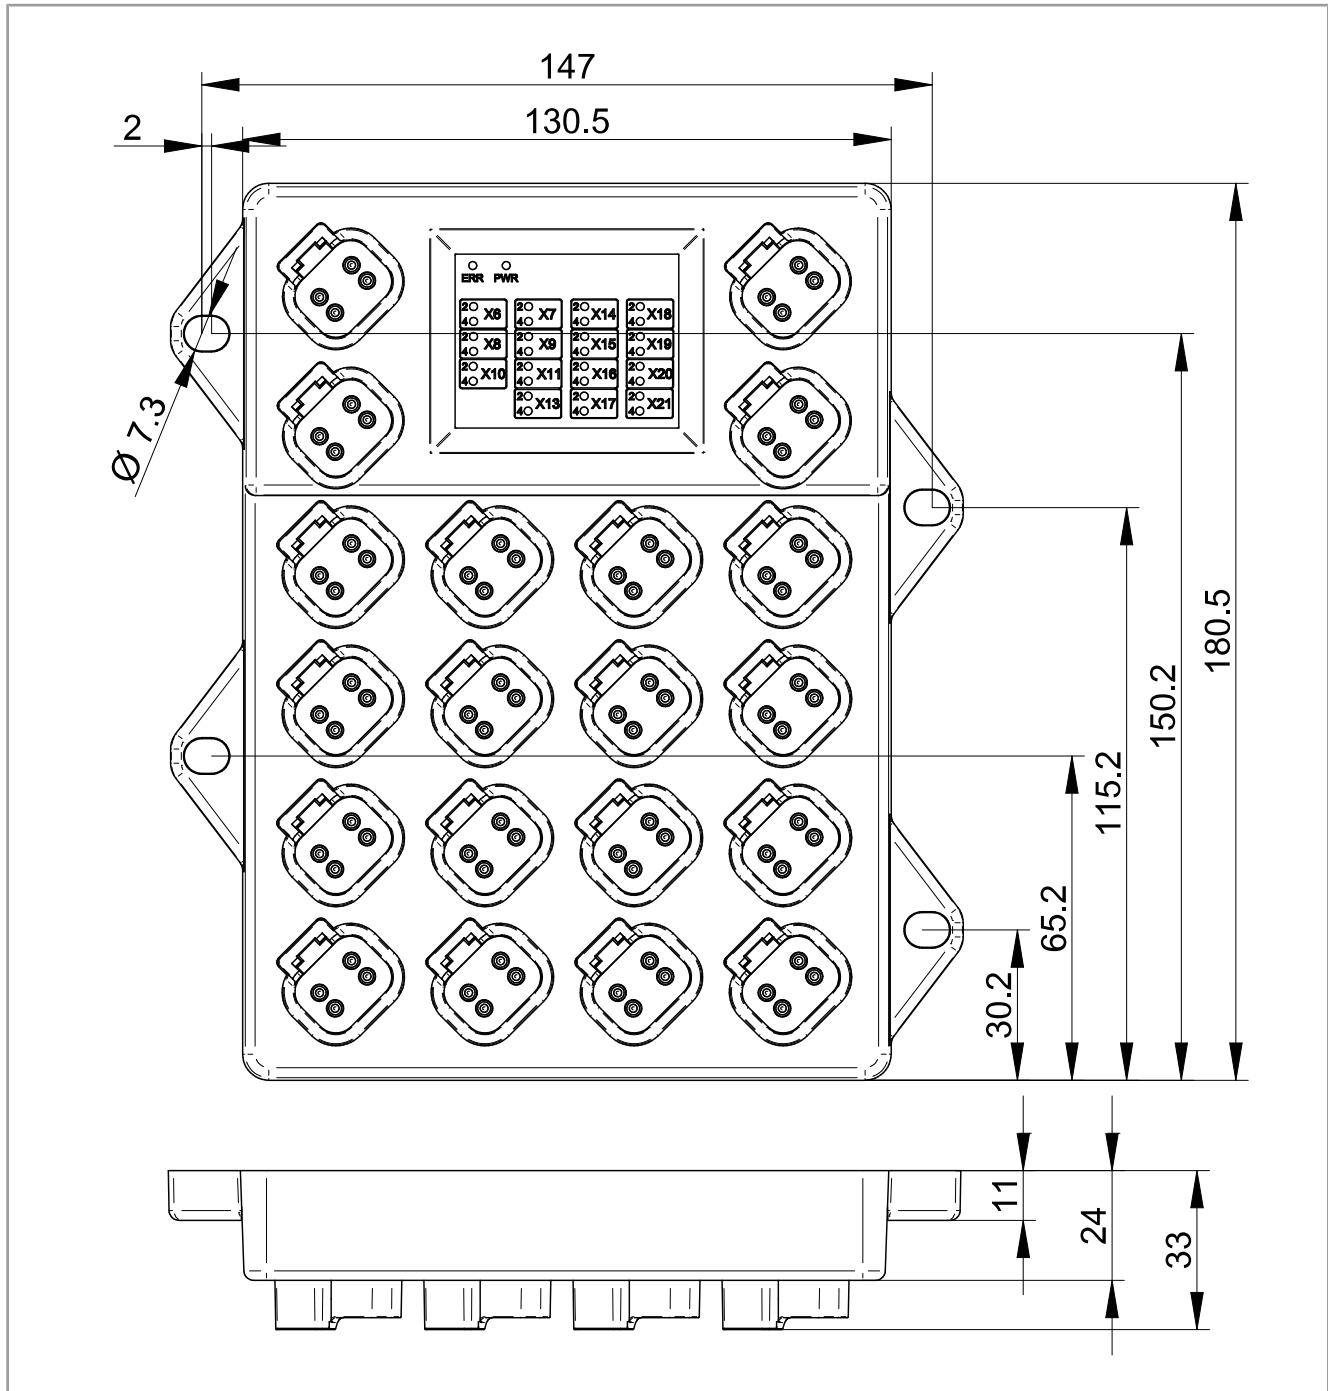


Fig. 6: Dimension in mm

### Info

#### CAD data

For CAD data go to [www.bucherautomation.com](http://www.bucherautomation.com) and navigate to the product page JXM-IO-EX35 > Downloads.

## 4.2 Mechanical specifications

| Parameter                       | Description                                       | Standards   |
|---------------------------------|---------------------------------------------------|-------------|
| <b>Weight</b>                   | 800 g                                             |             |
| <b>Enclosure specifications</b> |                                                   |             |
| Material                        | polyamide                                         |             |
| Enclosure potential             | Isolated                                          |             |
| <b>Vibration resistance</b>     | 10 Hz ... 150 Hz, 6 h                             | ISO 16750-3 |
| <b>Shock resistance</b>         |                                                   |             |
| Type of shock                   | Half-sine wave                                    | ISO 16750-3 |
| Intensity and duration          | 50 g for 11 ms                                    |             |
| Number and direction            | 10 shocks in the directions of all 3 spatial axes |             |
| <b>Free fall</b>                |                                                   |             |
| Height of fall                  | From 1 m height on solid ground                   | ISO 16750-3 |

Tab. 2: Mechanical specifications

## 4.3 Electrical properties

### Output driver supply

| Parameter                            | Description                                                                                                                    |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| Abbreviation                         | VBAT_PWR                                                                                                                       |
| Total current                        | Max. 24 A                                                                                                                      |
| Operating voltage                    | DC 8 V ... 32 V                                                                                                                |
| Protection against polarity reversal | Max. 32 V<br>There is the danger of a short circuit if the polarity is reversed. Protect the circuit by an external 25 A fuse. |
| Voltage protection                   | +36 V for 1 h at $T_{\max}$ -20 °C, function state C                                                                           |

Tab. 3: Output driver supply

### ECU power supply

| Parameter                            | Description                                                                                                                   |
|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Abbreviation                         | VBAT_ECU                                                                                                                      |
| Operating voltage                    | DC 8 V ... 32 V                                                                                                               |
| Protection against polarity reversal | Max. 32 V<br>There is the danger of a short circuit if the polarity is reversed. Protect the circuit by an external 2 A fuse. |
| Voltage protection                   | +36 V for 1 h at $T_{\max}$ -20 °C, function state C                                                                          |

Tab. 4: ECU power supply

## Ground reference

| Pin     | Purpose                          |
|---------|----------------------------------|
| GND_PWR | Ground for VBAT_PWR and VBAT_ECU |
| GND_SEN | Ground for VEXT_SEN              |

**Tab. 5:** Ground reference

## 4.4 Environmental conditions

| Parameter                                        | Description                                                                                                                                     | Standards   |
|--------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| Operating temperature                            | -40 °C ... +85 °C                                                                                                                               | ISO 16750-4 |
| Storage temperature                              | -40 °C ... +85 °C                                                                                                                               |             |
| Relative humidity                                | 5 % ... 95 %                                                                                                                                    |             |
| Weather resistance                               | The device is designed for use in all weather conditions and is suitable for outdoor use.                                                       |             |
| Salt water resistance                            | The device is not designed for maritime applications.                                                                                           |             |
| Maximum installation height above sea level (NN) | 2000 m                                                                                                                                          |             |
|                                                  | The maximum installation height is relevant only in the context of safe system shutdown (see <a href="#">Safety-related torque-off [► 7]</a> ). |             |
| Pollution degree                                 | Level 2                                                                                                                                         |             |
| <b>Degree of protection</b>                      |                                                                                                                                                 |             |
| Without mating connector                         | IP65                                                                                                                                            |             |
| With mating connector                            | IP69K                                                                                                                                           |             |

**Tab. 6:** Environmental conditions

## 4.5 EMI values

The device has E1 approval according to ECE R10 Rev. 5 and CE conformity according to ISO 14982 and ISO 13766-2.

### Pulses ISO 7637-2

| Test pulse | Values | Function class |
|------------|--------|----------------|
| 1          | -450 V | C              |
| 2 a        | +37 V  | A              |
| 2b         | +20 V  | C              |
| 3 a        | -150 V | A              |
| 3b         | +150 V | A              |

**Tab. 7:** Pulses ISO 7637-2

**Pulses ISO 16750-2**

| Test pulse | Values                                    | Function class            |
|------------|-------------------------------------------|---------------------------|
| 4          | Ua1: -12 V / 50 ms<br>Ua2: -5 V / 500 ms  | C (24 V systems, ECE R10) |
| 4          | Ua1: -6 V / 50 ms<br>Ua2: -2.5 V / 500 ms | C (12 V systems, ECE R10) |
| 5 a        | Load dump<br>123 V / 2 $\Omega$ / 350 ms  | A                         |

**Tab. 8:** Pulses ISO 16750-2**Irradiation as per ISO 11452**

| Parameter   | Values                   | Function class |
|-------------|--------------------------|----------------|
| Irradiation | 200 MHz ... 2 GHz 30 V/m | A              |

**Tab. 9:** Irradiation as per ISO 11452**RFD current feed as per ISO 11452-4**

| Parameter                    | Values                      | Function class |
|------------------------------|-----------------------------|----------------|
| RFD current feed<br>BIC test | 20 MHz ... 400 MHz<br>60 mA | A              |

**Tab. 10:** RFD current feed as per ISO 11452-4**Emission CISPR 25**

| Parameter           | Values               | Function class            |
|---------------------|----------------------|---------------------------|
| Narrowband emission | 30 MHz ... 1,000 MHz | At least 1 dB below limit |
| Wideband emission   | 30 MHz ... 1,000 MHz | At least 1 dB below limit |

**Tab. 11:** Emission CISPR 25**ESD EN 61000-4-2**

| Parameter             | Values     | Function class |
|-----------------------|------------|----------------|
| Contact discharge     | $\pm 4$ kV | A              |
| Discharge through air | $\pm 8$ kV | A              |

**Tab. 12:** ESD EN 61000-4-2

## 4.6 Outputs

### Output PWMi\_H3

| Parameter                                             | Description                                                                       |                                |
|-------------------------------------------------------|-----------------------------------------------------------------------------------|--------------------------------|
| High-side PWM output with precise current diagnostics |                                                                                   |                                |
| Abbreviation                                          | PWMi_H3                                                                           |                                |
| Quantity                                              | 4                                                                                 |                                |
| Peak Current                                          | 3 A per channel                                                                   |                                |
| Load range                                            | 0.2 A ... 3 A per channel                                                         |                                |
| Properties                                            | No-load detection                                                                 | Compatible with inductive load |
|                                                       | Overcurrent detection, precise current measurement                                |                                |
| Pulse width modulation                                |                                                                                   |                                |
| PWM frequency                                         | 5 Hz ... 1,500 Hz                                                                 |                                |
| Resolution                                            | 0.1 %                                                                             |                                |
| Dithering frequency                                   | 50 Hz ... 800 Hz                                                                  |                                |
| Dither amplitude                                      | 0% ... 50%                                                                        |                                |
| Current control                                       | PID controller with configurable control parameters                               |                                |
| Control period                                        | ≥ 5 ms, adjustable                                                                |                                |
| Current diagnostics                                   |                                                                                   |                                |
| Resolution                                            | 12 bits                                                                           |                                |
| Measuring range                                       | 0.2 A ... 3 A                                                                     |                                |
| Measuring accuracy                                    | ±2.5 % of 3 A                                                                     |                                |
| Use as input                                          |                                                                                   |                                |
| NPN or PNP input                                      | NOTICE! Switching the interface to NPN or PNP affects the entire PWMi_H3_x group! |                                |
|                                                       | L level ≤ 1.6 V                                                                   | H level ≥ 4.6 V                |

Tab. 13: Outputs PWMi\_H3\_1 ... PWMi\_H3\_4

### Sensor output VEXT\_SEN

| Parameter                    | Description         |
|------------------------------|---------------------|
| <b>Sensor supply output</b>  |                     |
| Abbreviation                 | VEXT_SEN            |
| Quantity                     | 2                   |
| Measuring accuracy (voltage) | 1 %                 |
| Properties                   | Short-circuit-proof |

Tab. 14: Sensor output VEXT\_SEN

## Output VREF\_10V

| Parameter                     | Description                                                                                                              |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>10 V reference voltage</b> |                                                                                                                          |
| Abbreviation                  | VREF_10V                                                                                                                 |
| Quantity                      | 1                                                                                                                        |
| <b>Operating voltage</b>      | 10 V                                                                                                                     |
| Accuracy                      | 1 %                                                                                                                      |
| <b>Operating current</b>      | 100 mA min                                                                                                               |
| Accuracy                      | 1 %                                                                                                                      |
| <b>Diagnosis</b>              | The voltage generated by the 10 V power supply unit can be read via SDO. Every channel can be checked for short circuit. |

Tab. 15: VREF\_10V

### 4.6.1 Half-bridge outputs

All half-bridge drivers feature a Hall-effect Sensor to enable more precise current measurement.

#### Info

#### Limitation

Note that 12 A half-bridges require that the half-bridges 1 and 2, and half-bridges 3 and 4 use the same frequency. As a result, the frequency can be set individually for each full bridge.

Select outputs can be paralleled to double the current-carrying capacity.

Example:

Configuring the PWMi\_HL12\_1 pin to PWMO\_HB24, automatically co-allocates the PWMi\_H12\_2 pin to return the same signal as PWMi\_HL12\_1.

The following pins support this configuration:

- PWMi\_HL12\_1 (co-allocates PWMi\_HL12\_2)
- PWMi\_HL12\_3 (co-allocates PWMi\_HL12\_4)

## Output PWMi\_HL12

| Parameter                                                        | Description                                 |
|------------------------------------------------------------------|---------------------------------------------|
| <b>PWM Half bridges, up to 12 A, with current monitoring</b>     |                                             |
| <b>NOTICE! The HL mode supports measuring negative currents.</b> |                                             |
| Abbreviation                                                     | PWMi_HL12                                   |
| Quantity                                                         | 4                                           |
| Peak Current                                                     | 12 A per channel                            |
| Load range                                                       | 0.02 A ... 12 A per channel, 30 A peak load |
| Properties                                                       | Compatible with inductive load              |
|                                                                  | Overcurrent detection, current measurement  |

| Parameter              | Description      |                  |
|------------------------|------------------|------------------|
| Pulse width modulation |                  |                  |
| PWM frequency          | 10 Hz ... 1 kHz  | 1 kHz ... 15 kHz |
| Resolution             |                  |                  |
| Min PWM frequency      | 10 Hz            |                  |
| Dither frequency       | 50 Hz ... 800 Hz |                  |
| Dither amplitude       | 0% ... 50%       |                  |
| Current diagnostics    |                  |                  |
| Resolution             | 12 bits          |                  |
| Measuring range        | 0 A ... 15 A     |                  |
| Measuring accuracy     | ±15 %            |                  |

Tab. 16: Outputs PWMi\_HL12\_1 ... PWMi\_HL12\_8

4.6.2 Current diagnostics at the outputs

The output tolerances are dissimilar (see [Outputs \[► 18\]](#))

All outputs are calibrated at the factory to achieve the highest possible accuracy. For low current values, the measurement is not linear. The measurement is therefore linearized by the firmware:

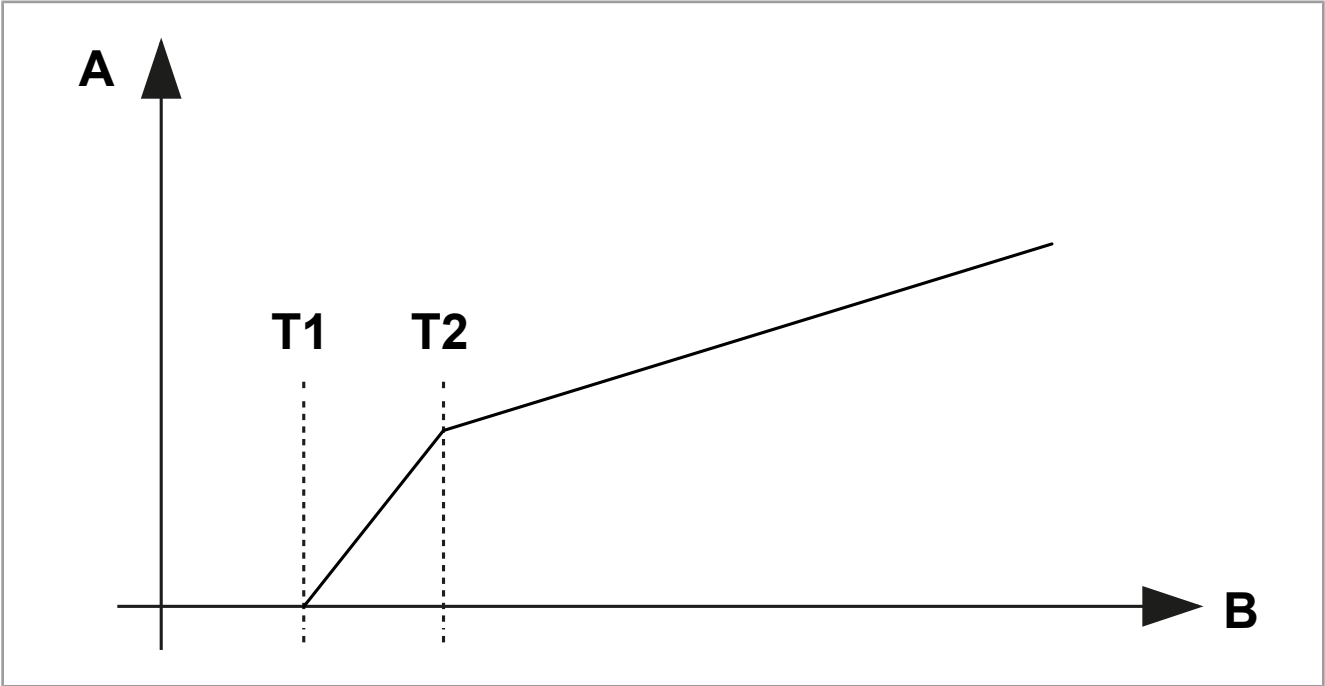


Fig. 7: Graph: Principle of linearization

|   |               |
|---|---------------|
| A | Current value |
| B | ADC value     |

- T2 is 200 mA, lower current levels are displayed as 0.
- T2 is 500 mA. From 200 mA to 500 mA the measured current value is linearized.

### 4.6.3 Overcurrent trip at outputs

If overcurrent flows through an output for 500 ms (default value), the overcurrent shutdown becomes active. This value can be changed using the parameter `OVERCURRENT_TIME`. If an overcurrent event is detected, the output shuts down and the overcurrent bit is set for 10 seconds. During this time the port cannot be switched on again.

#### Re-enabling the port

- ✓ The JXM-IO-EX35 is in the **Operational** state.
- ✓ 10 s have passed since the output was shut down.
- Set the output value (digital or PWM) of the respective port again.

## 4.7 Inputs

All inputs in the operating voltage range are surge-proof and overcurrent-proof. The JXM-IO-EX35 has 2 separate `VEXT_SEN` pins that should be used to supply the sensors. The connector pins provide the battery voltage through a PTC thermistor. The output voltage can be read back in the device so that a failure of the sensor supply can be detected.

Alternatively, the analog inputs can also be used as digital inputs (`DI_PNP`).

Complementing the 6 analog inputs an analog PT1000 input (`AI_PT1000`) connects to a PT1000 thermal sensor.

#### Analog inputs

| Parameter                                 | Description                                                                                                                                            |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Analog inputs</b>                      |                                                                                                                                                        |
| Abbreviation                              | AI                                                                                                                                                     |
| Quantity                                  | 4                                                                                                                                                      |
| Resolution                                | 12 bits                                                                                                                                                |
| <b>Voltage measuring</b>                  |                                                                                                                                                        |
| Rated measuring range                     | 0 V ... 10 V                                                                                                                                           |
| Overvoltage measurement                   | 10 V ... 12 V                                                                                                                                          |
| Input resistance                          | $\geq 35 \text{ k}\Omega$                                                                                                                              |
| Maximum voltage                           | +32 V                                                                                                                                                  |
| Measuring accuracy                        | $\pm 2 \%$ of 10 V                                                                                                                                     |
| <b>Current measurement</b>                |                                                                                                                                                        |
| Measuring range                           | 0 ... 20 mA                                                                                                                                            |
| Overcurrent range                         | 21 ... 24 mA                                                                                                                                           |
| Load resistor                             | 120 $\Omega$                                                                                                                                           |
| Measuring accuracy                        | $\pm 1.5 \%$ of 20 mA                                                                                                                                  |
| Behavior in case of overcurrent detection | In case of overcurrent, the current measurement is interrupted. At the end of the overcurrent event, the current measurement is automatically resumed. |
| <b>As <code>DI_PNP</code></b>             |                                                                                                                                                        |
| H level                                   | $\geq 4.6 \text{ V}$                                                                                                                                   |

| Parameter        | Description               |
|------------------|---------------------------|
| L level          | $\leq 1.6 \text{ V}$      |
| Input frequency  | 10 Hz max                 |
| Input resistance | $\geq 35 \text{ k}\Omega$ |

**Tab. 17:** Analog inputs

### Digital inputs

All digital inputs are PNP inputs. All outputs can also be used as simple digital NPN or PNP inputs with restrictions.

| Parameter                                        | Description             |
|--------------------------------------------------|-------------------------|
| <b>Digital inputs with frequency measurement</b> |                         |
| Abbreviation                                     | DI                      |
| Quantity                                         | 4                       |
| Pull-down resistor                               | $< 5.6 \text{ k}\Omega$ |
| H level                                          | $\geq 4.6 \text{ V}$    |
| L level                                          | $\leq 1.6 \text{ V}$    |
| Input frequency                                  | 0.1 Hz ... 10 kHz       |
| Dielectric strength                              | +32 V max               |

**Tab. 18:** Digital inputs DI\_1 ... DI\_8

### Configuration inputs

Configuration inputs are tristate inputs and are used to set the node ID. The base address can be set by the user and has the default value 0x60. The node ID can be shifted by connecting the configuration inputs with VBAT\_ECU or GND via an offset.

| Parameter                                               | Description                    |
|---------------------------------------------------------|--------------------------------|
| <b>Configuration inputs for configuring the node ID</b> |                                |
| Abbreviation                                            | CFG1                      CFG2 |
| Quantity                                                | 2                              |

**Tab. 19:** Configuration inputs CFG1 ... CFG2

For more information, refer to section [Setting the node ID \[► 52\]](#).

## 5 Mechanical installation

### **WARNING**



#### **Risk of burns**

Contact with hot surface may cause burns.

- ▶ Take protective measures to prevent inadvertent contact with the device.
- ▶ Allow the device to cool down for some time before you start working on it.

### **NOTICE**



#### **Damages to material or functional impairment due to welding**

Welding on the chassis may damage the device material, or impair device functions.

- ▶ Before you start welding, disconnect all connections between the device and the electric system of the vehicle.
- ▶ Protect the device from flying sparks and welding beads (splatter).
- ▶ Do not touch the device with the welding electrode or earth clamp.

### **NOTICE**



#### **Dirt and moisture can affect the electrical connections**

- ▶ Protect unused pins using blanking plugs.
- ▶ Protect all electrical connections with appropriate single wire seals.
- ▶ Clean the area around a connector prior to removing the mating connector.

### **NOTICE**



#### **Functional impairment due to magnets or motors with coil**

Using magnets or motors with a coil in the vicinity of the JXM-IO-EX35 may adversely affect current readings of the inputs and outputs.

- ▶ Ensure that there is sufficient clearance or shield the JXM-IO-EX35.

## 5.1 Requirements for the Installation Location and Mounting Surface

### Requirements for the Mounting Surface

| Parameters         | Description                                                                                                                          |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Suitable Materials | No special material requirements                                                                                                     |
| Shape / Texture    | The surface must be level.                                                                                                           |
| Mounting eyelets   | All existing mounting eyelets must be secured with screws. The device can be mounted directly on the vehicle or on a mounting plate. |

**Tab. 20:** Requirements for the Mounting Surface

### Requirements for the Installation Space

- Adequate air circulation
- Sufficient distance from parts that generate a great deal of heat
- The device must be accessible at all times for service work.

## 5.2 Mounting orientation

The JXM-IO-EX35 can be installed in any position.

### Horizontal mounting orientation


#### NOTICE



#### Ingress of moisture in the case of horizontal mounting orientation

If the device is installed horizontally, moisture can penetrate via the sockets.

- In horizontal mounting orientation all Bucher Automation connectors must be plugged in.

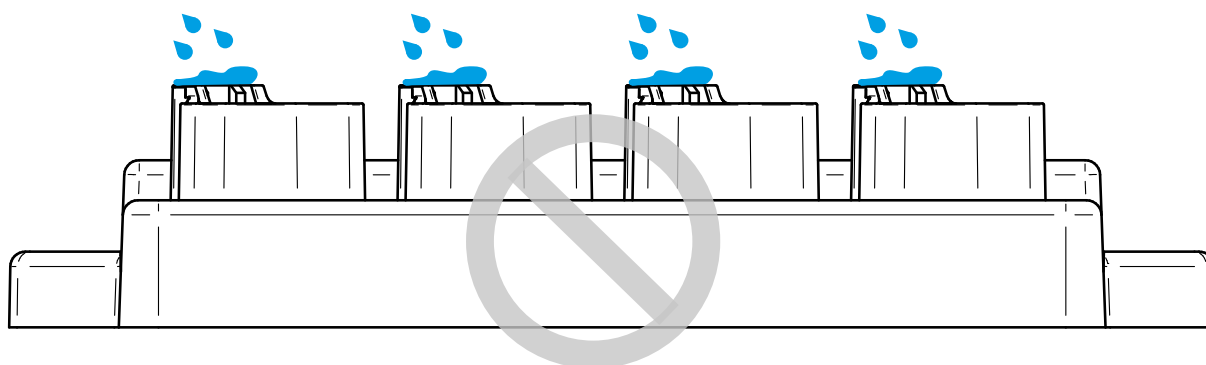

**Fig. 8:** Horizontal mounting orientation

### Several JXM-IO-EX35

Where several JXM-IO-EX35 devices are installed side by side, the distance between the individual devices must be at least 16 mm.

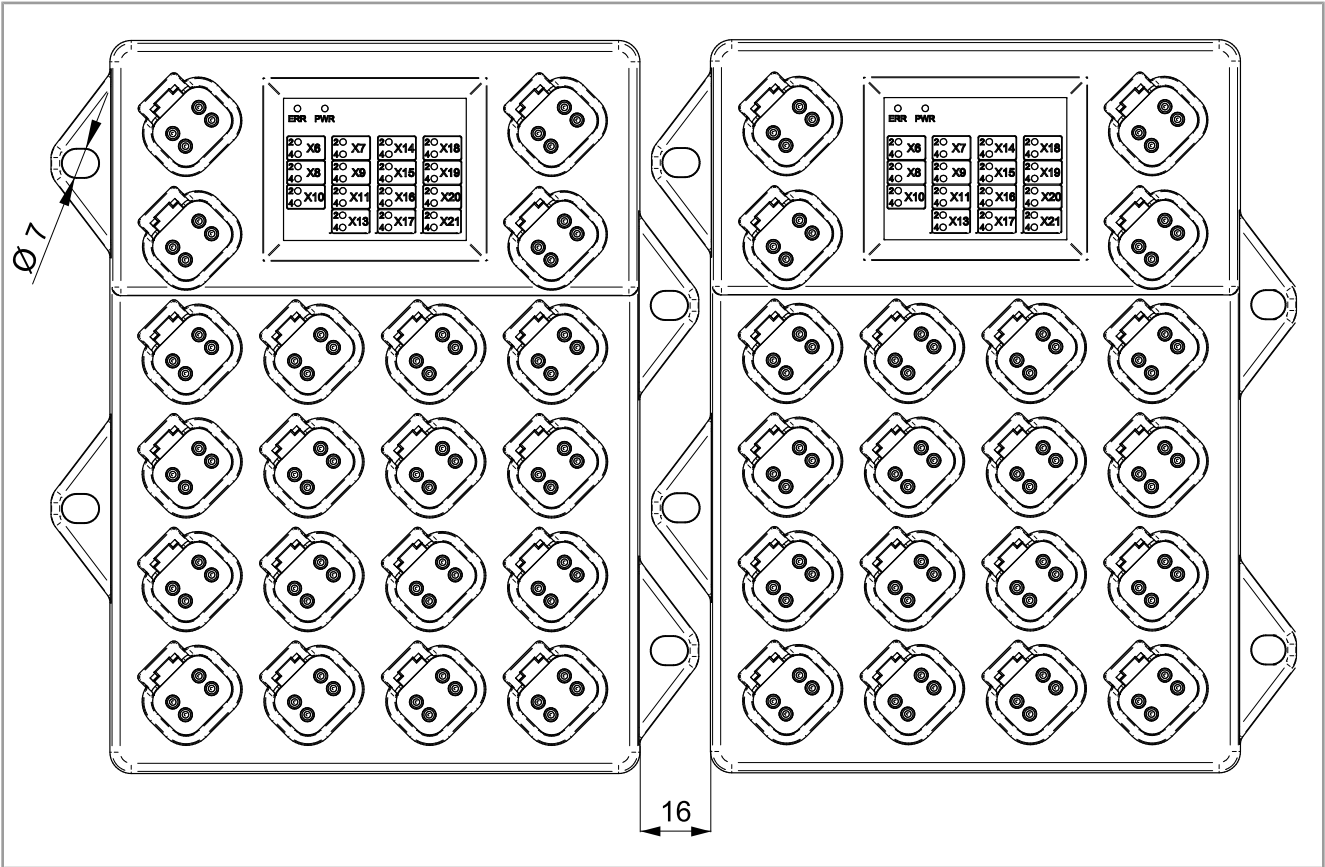


Fig. 9: Mounting positions, all dimensions in mm

### 5.3 Installing the expansion module

#### Fastening material

Installation hardware is not included in the scope of delivery. Bucher Automation AG recommends the following mounting hardware:

| Material                         | Properties                                                                                                                          |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Screws/bolts                     | M6                                                                                                                                  |
| Lock washers                     | Lock washers are recommended to prevent vibration-induced loosening of the screws.                                                  |
| Cable fixation and strain relief | Mechanical fixation and strain relief is necessary to avoid vibration-induced cable breakage or excessive stress on the connectors. |

Tab. 21: Fastening material

#### Mechanical installation

- Use all mounting lugs to fasten the JXM-IO-EX35. The stud torque is 4 Nm max.

## 6 Electrical connection

### **WARNING**



#### **Signal interference due to faulty CAN wiring**

Unshielded or untwisted CAN lines can result in communication disruptions. In extreme cases a malfunction of the device may result in personal injuries.

- ▶ Connect 120  $\Omega$  terminating resistors to both ends of the CAN bus.

### **NOTICE**



#### **Improving electromagnetic compatibility**

Improper implementation of the wiring harness may impair electromagnetic compatibility.

- ▶ Keep the cables as short as possible.
- ▶ Lay power lines and signal lines separated from each other.

### **NOTICE**



#### **Damages to material or functional impairment**

Improper implementation of the wiring harness may cause mechanical stress.

- ▶ Protect the cables from bending, twisting or chafing.
- ▶ Install strain reliefs for the connecting cables.

### **NOTICE**



#### **Surges resulting from missing protection or fusing**

Surges may cause malfunctions or damage to the product.

- ▶ Protect the voltage inputs from surges according to the requirements.
- ▶ Ensure that the device is handled in accordance with ESD regulations.

### **NOTICE**



#### **Interferences due to differences in potential**

Differences in potential can lead to interferences.

- ▶ Wire sensors and actuators including their supply lines in star configuration to prevent differences in potential.

## 6.1 Pin assignment

### 6.1.1 4-pin Deutsch ports

The JXM-IO-EX35 features 20 4-pin DEUTSCH connectors.

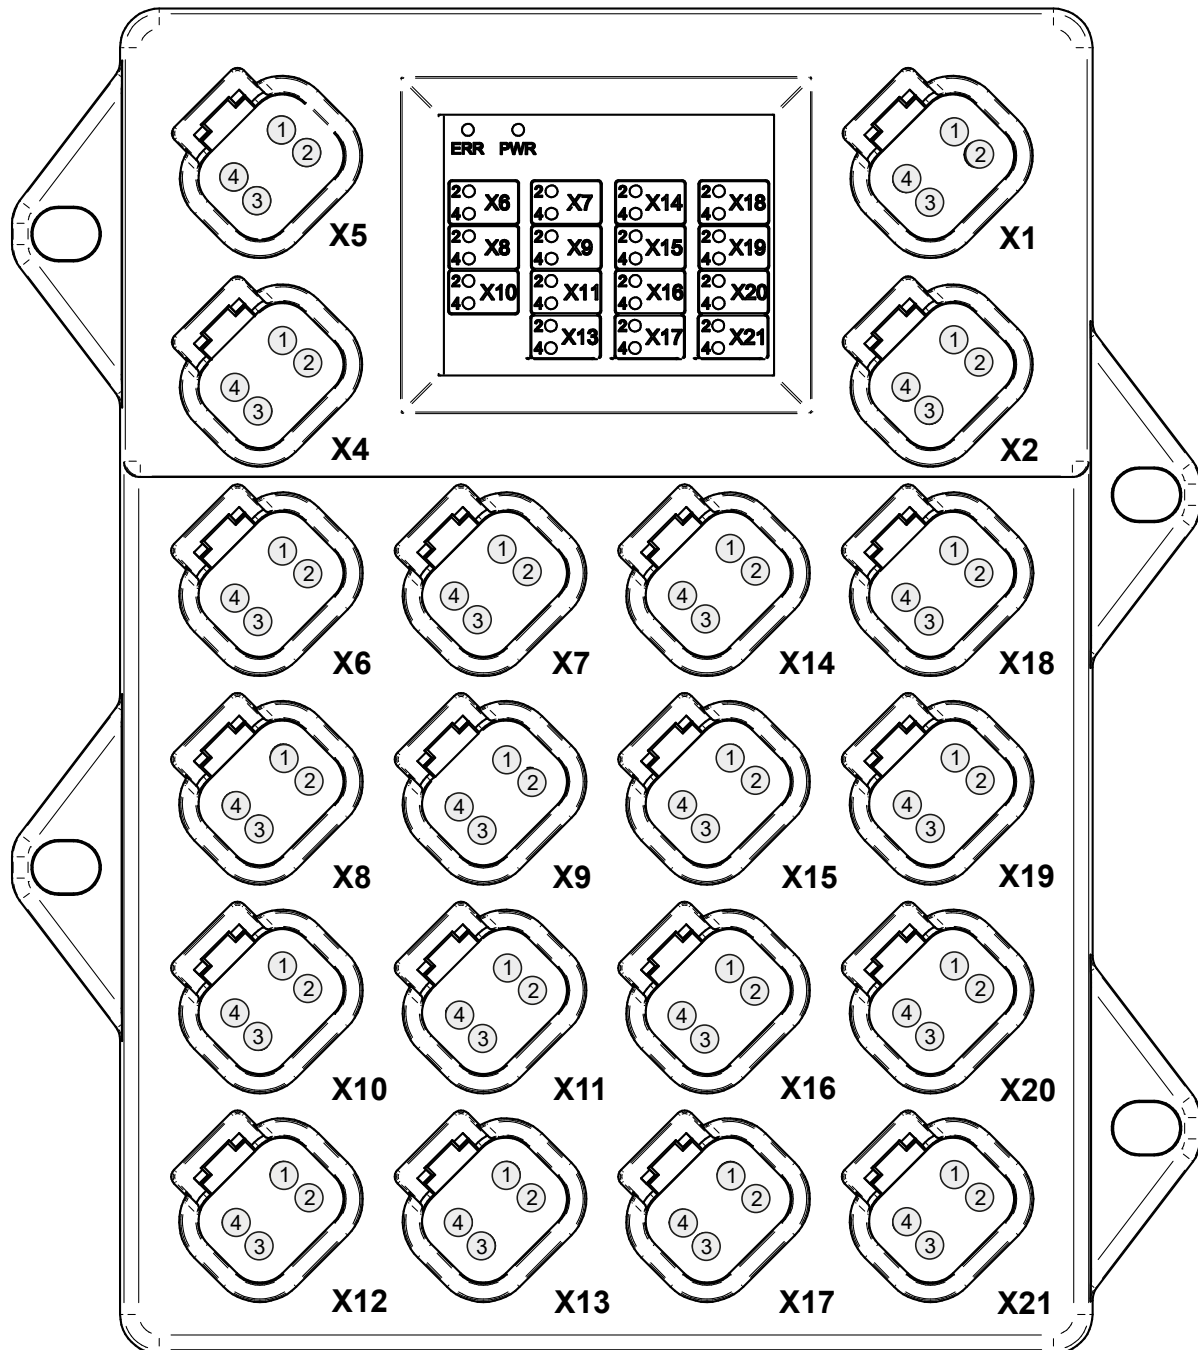


Fig. 10: Connections

#### Connection X1 – VBAT\_OUT

| Pin | Signal   |
|-----|----------|
| 1   | VBAT_PWR |
| 2   | VBAT_PWR |
| 3   | GND_PWR  |

| Pin | Signal  |
|-----|---------|
| 4   | GND_PWR |

**Tab. 22:** Connection X1 – VBAT\_OUT**Connection X2 – VBAT\_IN**

| Pin | Signal   |
|-----|----------|
| 1   | VBAT_PWR |
| 2   | VBAT_PWR |
| 3   | GND_PWR  |
| 4   | GND_PWR  |

**Tab. 23:** Connection X2 – VBAT\_IN**Connection X4 – CAN**

| Pin | Signal   |
|-----|----------|
| 1   | VBAT_ECU |
| 2   | CAN1_L   |
| 3   | BOOTSEL. |
| 4   | CAN1_H   |

**Tab. 24:** Connection X4 – CAN**Connection X5 – CAN**

| Pin | Signal   |
|-----|----------|
| 1   | VBAT_ECU |
| 2   | CAN1_L   |
| 3   | GND      |
| 4   | CAN1_H   |

**Tab. 25:** Connection X5 – CAN**Connection X6 – AI1 ... AI\_2**

| Pin | Signal       |
|-----|--------------|
| 1   | OUT_VREF_SEN |
| 2   | AI_1         |
| 3   | GND_SEN      |
| 4   | AI_2         |

**Tab. 26:** Connection X6 – AI1 ... AI\_2**Connection X7 – AI3 ... AI\_4**

| Pin | Signal       |
|-----|--------------|
| 1   | OUT_VREF_SEN |
| 2   | AI_3         |
| 3   | GND_SEN      |
| 4   | AI_5         |

**Tab. 27:** Connection X7 – AI3 ... AI\_4

**Connection X8 – DI\_1 ... DI\_2**

| Pin | Signal         |
|-----|----------------|
| 1   | OUT_VEXT_SEN_1 |
| 2   | DI_1           |
| 3   | GND_SEN        |
| 4   | DI_2           |

**Tab. 28:** Connection X8 – DI\_1 ... DI\_2**Connection X9 – DI\_3 ... DI\_4**

| Pin | Signal         |
|-----|----------------|
| 1   | OUT_VEXT_SEN_2 |
| 2   | DI_3           |
| 3   | GND_SEN        |
| 4   | DI_4           |

**Tab. 29:** Connection X9 – DI\_3 ... DI\_4**Connection X10 – PWMi\_H3\_1... PWMi\_H3\_2**

| Pin | Signal    |
|-----|-----------|
| 1   | VBAT_ECU  |
| 2   | PWMi_H3_1 |
| 3   | GND_PWR   |
| 4   | PWMi_H3_2 |

**Tab. 30:** Connection X10 – PWMi\_H3\_1... PWMi\_H3\_2**Connection X11 – PWMi\_H3\_3... PWMi\_H3\_4**

| Pin | Signal    |
|-----|-----------|
| 1   | VBAT_ECU  |
| 2   | PWMi_H3_3 |
| 3   | GND_PWR   |
| 4   | PWMi_H3_4 |

**Tab. 31:** Connection X11 – PWMi\_H3\_3... PWMi\_H3\_4**Connection X12 – CFG**

| Pin | Signal      |
|-----|-------------|
| 1   | VBAT_ECU    |
| 2   | CFG1        |
| 3   | GND         |
| 4   | IN_OUT_CFG2 |

**Tab. 32:** Connection X12 – CFG

**Connection X13 – PWMi\_H3\_5... PWMi\_H3\_6**

| Pin | Signal    |
|-----|-----------|
| 1   | VBAT_ECU  |
| 2   | PWMi_H3_5 |
| 3   | GND_PWR   |
| 4   | PWMi_H3_6 |

**Tab. 33:** Connection X13 – PWMi\_H3\_5... PWMi\_H3\_6**Connection X14 – PWMi\_HR3\_13 ... PWMi\_HR3\_14**

| Pin | Signal     |
|-----|------------|
| 1   | GND_PWR    |
| 2   | PWMi_H3_13 |
| 3   | GND_PWR    |
| 4   | PWMi_H3_14 |

**Tab. 34:** Connection X14 – PWMi\_HR3\_13 ... PWMi\_HR3\_14**Connection X15 – PWMi\_H3\_15 ... PWMi\_H3\_16**

| Pin | Signal     |
|-----|------------|
| 1   | GND_PWR    |
| 2   | PWMi_H3_15 |
| 3   | GND_PWR    |
| 4   | PWMi_H3_16 |

**Tab. 35:** Connection X15 – PWMi\_H3\_15 ... PWMi\_H3\_16**Connection X16 – PWMi\_H3\_7 ... PWMi\_H3\_8**

| Pin | Signal    |
|-----|-----------|
| 1   | VBAT_ECU  |
| 2   | PWMi_H3_7 |
| 3   | GND_PWR   |
| 4   | PWMi_H3_8 |

**Tab. 36:** Connection X16 – PWMi\_H3\_7 ... PWMi\_H3\_8**Connection X17 – PWMi\_H3\_9 ... PWMi\_H3\_10**

| Pin | Signal     |
|-----|------------|
| 1   | VBAT_ECU   |
| 2   | PWMi_H3_9  |
| 3   | GND_PWR    |
| 4   | PWMi_H3_10 |

**Tab. 37:** Connection X17 – PWMi\_H3\_9 ... PWMi\_H3\_10

**Connection X18 – PWMi\_HL12\_1 ... PWMi\_HL12\_2**

| Pin | Signal      |
|-----|-------------|
| 1   | GND_PWR     |
| 2   | PWMi_HL12_1 |
| 3   | GND_PWR     |
| 4   | PWMi_HL12_2 |

**Tab. 38:** Connection X18 – PWMi\_HL12\_1 ... PWMi\_HL12\_2**Connection X19 – PWMi\_HL12\_3 ... PWMi\_HL12\_4**

| Pin | Signal      |
|-----|-------------|
| 1   | GND_PWR     |
| 2   | PWMi_HL12_3 |
| 3   | GND_PWR     |
| 4   | PWMi_HL12_4 |

**Tab. 39:** Connection X19 – PWMi\_HL12\_3 ... PWMi\_HL12\_4**Connection X20 – PWMi\_H3\_11 ... PWMi\_H3\_12**

| Pin | Signal     |
|-----|------------|
| 1   | VBAT_ECU   |
| 2   | PWMi_H3_11 |
| 3   | GND_PWR    |
| 4   | PWMi_H3_12 |

**Tab. 40:** Connection X20 – PWMi\_H3\_11 ... PWMi\_H3\_12**Connection X21 – NC**

| Pin | Signal   |
|-----|----------|
| 1   | VBAT_ECU |
| 2   | CAN2_L   |
| 3   | GND      |
| 4   | CAN2_H   |

**Tab. 41:** Connection X21 – CAN2**Abbreviations used in this document**

| Abbreviation | Description                                                                                 |
|--------------|---------------------------------------------------------------------------------------------|
| AI           | Analog input, current/voltage                                                               |
| AI_PT1000    | Analog input for PT1000 thermal sensor                                                      |
| CAN_TERM     | These two pins must be jumpered to enable the 120 $\Omega$ terminating resistor.            |
| CFG          | Configuration pins for setting the CAN node ID                                              |
| DI           | Digital input and frequency input PNP/NPN                                                   |
| GND_SEN      | Ground – sensor power supply                                                                |
| n.c.         | Reserved pin that must not be connected.<br><b>NOTICE! Seal unused pins with pin plugs.</b> |

| Abbreviation | Description                                       |
|--------------|---------------------------------------------------|
| PWMI_H3      | Current-controlled high-side PWM output up to 3 A |
| PWMI_HL12    | Half-bridge PWM output up to 12 A                 |
| VBAT_ECU     | Power supply only for ECU without load            |
| VBAT_PWR     | Power supply – load                               |
| VEXT_SEN     | Sensor supply (protected by PTC thermistor)       |
| VREF_SEN     | Sensor supply 10 V/100 mA                         |

**Tab. 42:** Abbreviations used in this document

## 6.2 Connecting 2-wire digital sensors

The following examples illustrate the wiring of a 2-wire sensor on the JXM-IO-EX35.


### NOTICE



#### Sensor compatibility

- Observe the technical data of the sensor and check compatibility with the JXM-IO-EX35.

#### Wiring example, analog sensor on X10

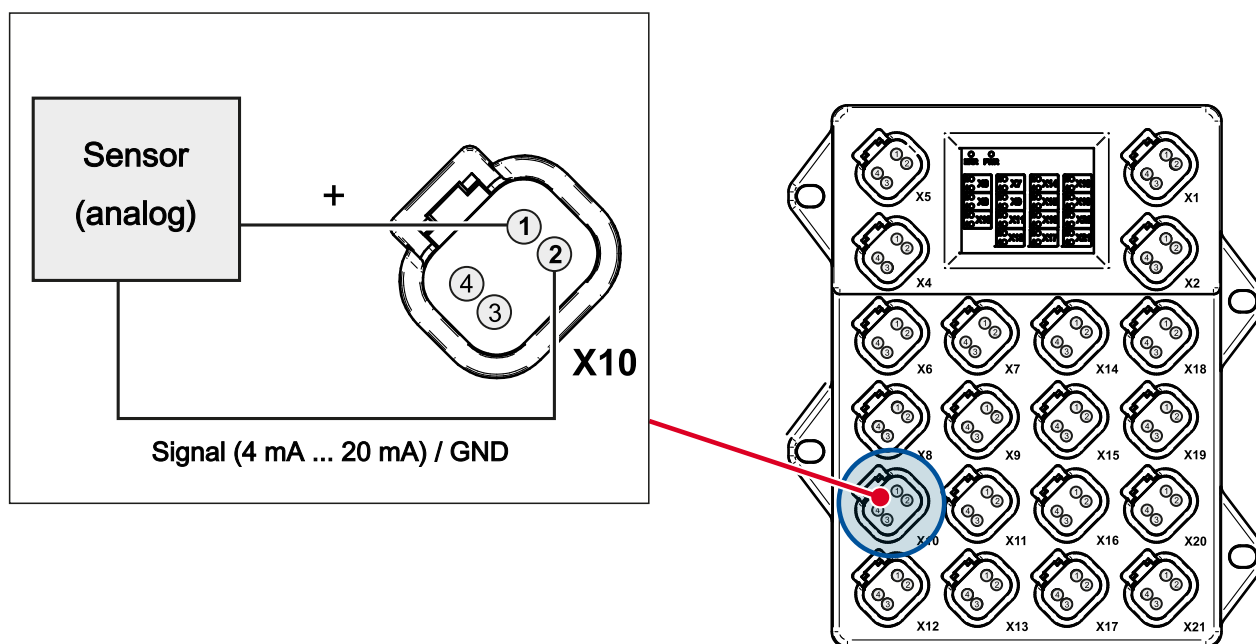

**Fig. 11:** Connecting analog 2-wire sensors

### Connection X10 – AI\_1 ... AI\_2

| Pin | Signal   |
|-----|----------|
| 1   | VREF_SEN |
| 2   | AI_1     |
| 3   | GND_SEN  |
| 4   | AI_2     |

Tab. 43: Connection X10 – AI\_1 ... AI\_2

### Wiring example, digital sensors on X6 and X7

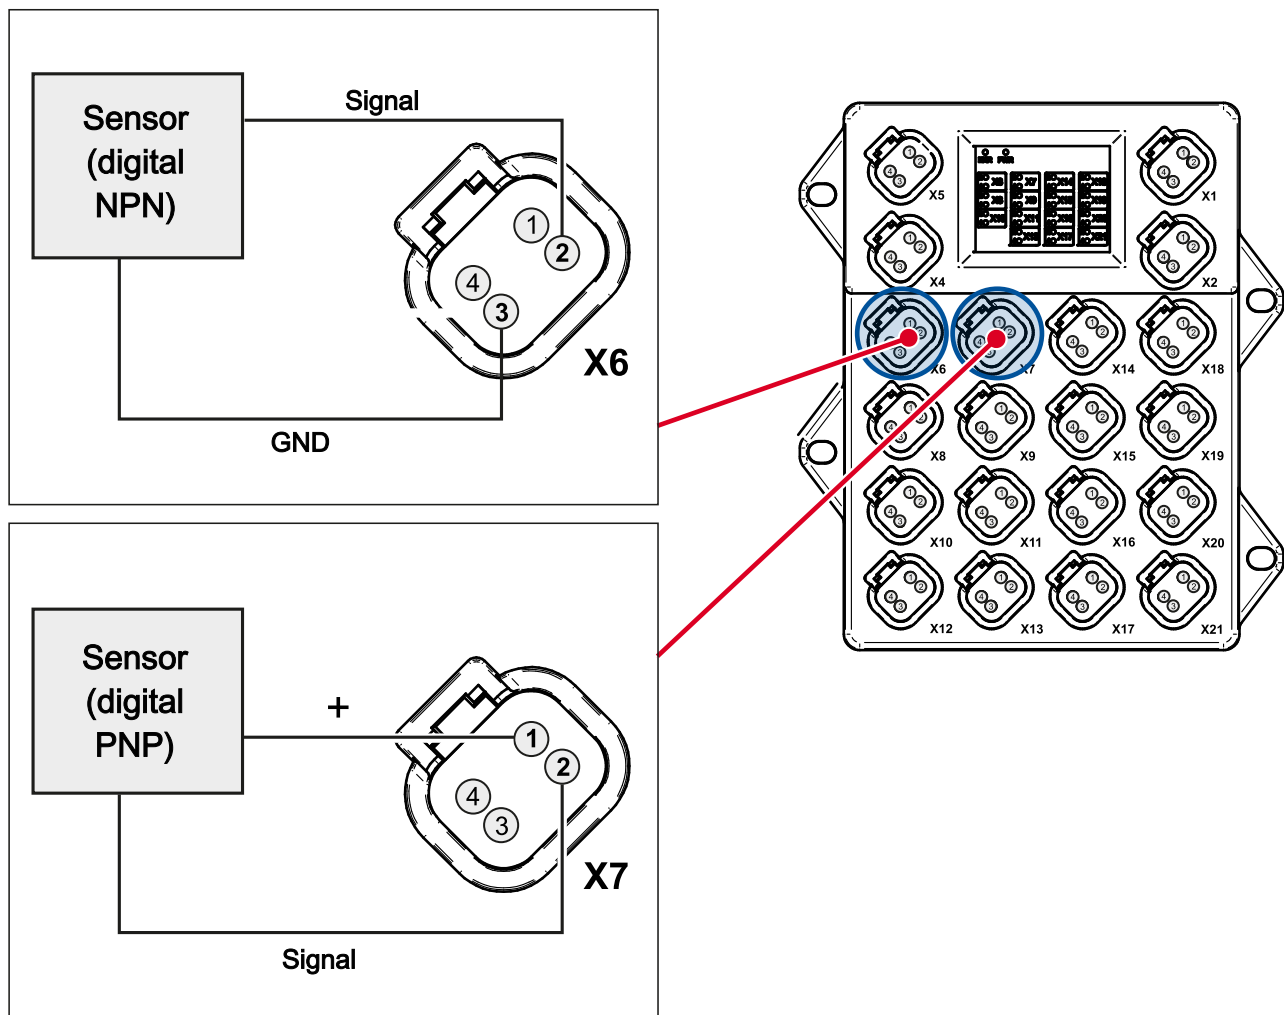


Fig. 12: Connecting digital 2-wire sensors

### Connection X6 – DI\_1 ... DI\_2

| Pin | Signal         |
|-----|----------------|
| 1   | OUT_VEXT_SEN_1 |
| 2   | DI_1           |
| 3   | GND_SEN        |
| 4   | DI_2           |

Tab. 44: Connection X6 – DI\_1 ... DI\_2

### Connection X7 – DI\_3 ... DI\_4

| Pin | Signal         |
|-----|----------------|
| 1   | OUT_VEXT_SEN_1 |
| 2   | DI_3           |
| 3   | GND_SEN        |
| 4   | DI_4           |

Tab. 45: Connection X7 – DI\_3 ... DI\_4

## 6.3 Connecting 3-wire digital sensors

The following example shows the wiring of a 3-wire sensor on the JXM-IO-EX35.

### NOTICE



#### Sensor compatibility

- Observe the technical data of the sensor and check compatibility with the JXM-IO-EX35.

### i Info

#### DI\_1 as NPN

Digital input DI\_P\_1 can also be configured as NPN input. The wiring remains the same.

### Connection example

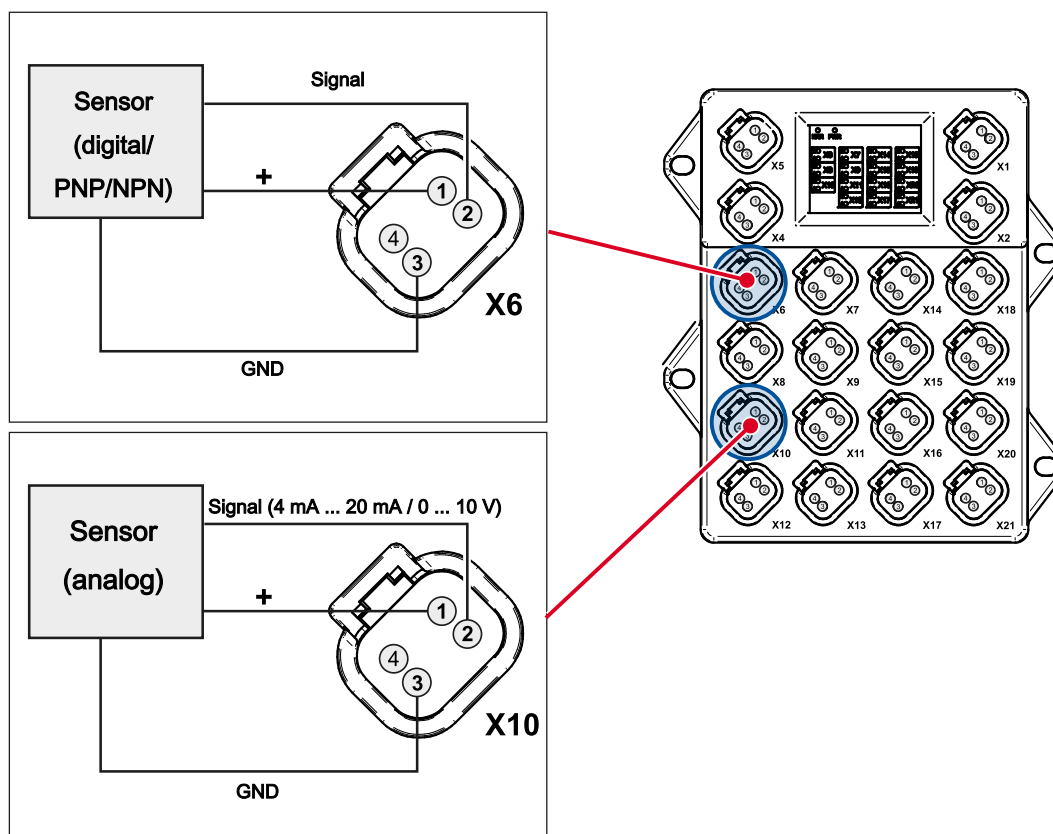


Fig. 13: Connecting 3-wire digital sensors

**Connection X6 – DI\_1 ... DI\_2**

| Pin | Signal     |
|-----|------------|
| 1   | VEXT_SEN_1 |
| 2   | DI_1       |
| 3   | GND_SEN    |
| 4   | DI_2       |

**Tab. 46:** Connection X6 – DI\_1 ... DI\_2**Connection X10 – AI\_1 ... AI\_2**

| Pin | Signal   |
|-----|----------|
| 1   | VREF_SEN |
| 2   | AI_1     |
| 3   | GND_SEN  |
| 4   | AI_2     |

**Tab. 47:** Connection X10 – AI\_1 ... AI\_2

# 7 Identification and Configuration

## 7.1 Identification

This chapter describes how to identify the JXM-IO-EX35 device:

- Determining the hardware revision
- Retrieving Electronic Data Sheet (EDS) information. The EDS holds numerous non-volatile production-relevant data.
- Determining the OS version of the device and its software components

### 7.1.1 Device information

**Device information**

| Index  | Subindex | Description                 | Type   | Types of access | Default value |
|--------|----------|-----------------------------|--------|-----------------|---------------|
| 0x1018 | 0        | Number of supported entries | U8     | R               |               |
|        | 1        | Manufacturer ID             | U32    | R               | 0x000000B3    |
|        | 2        | Product code                | U32    | R               |               |
|        | 3        | Revision number             | U32    | R               |               |
|        | 4        | Serial number               | U32    | R               |               |
| 0x1000 | 0        | Type of device              | U32    | R               |               |
| 0x1008 | 0        | Device Name                 | String | R               |               |
| 0x1009 | 0        | Hardware revision           | String | R               |               |
| 0x100A | 0        | Software version            | String | R               |               |

**Tab. 48:** Device information

### 7.1.2 Electronic Data Sheet (EDS)

Each JXM-IO-EX35 features an Electronic Data Sheet (EDS). Production-specific data is stored in the CANopen object indexes 0x4555 and 0x4565.

**EDS information**

| Index  | Subindex | Description                  | Type   | Types of access |
|--------|----------|------------------------------|--------|-----------------|
| 0x4555 | 0        | Number of supported entries  | U8     | R               |
|        | 1        | Reserved                     |        |                 |
|        | 2        | Reserved                     |        |                 |
|        | 3        | Reserved                     |        |                 |
|        | 4        | Module code                  | U16    | R               |
|        | 5        | Product name                 | String | R               |
|        | 6        | PCB revision number          | I16    | R               |
|        | 7        | PCB options                  | I16    | R               |
|        | 8        | Reserved                     |        |                 |
|        | 9        | Serial number                | String | R               |
|        | 10       | Production time stamp: Day   | U8     | R               |
|        | 11       | Production time stamp: Month | U8     | R               |
|        | 12       | Production time stamp: Year  | U16    | R               |
|        | 13       | Reserved                     |        |                 |
|        | 14       | Reserved                     |        |                 |
|        | 15       | Minimum OS version           | U32    | R               |
|        | 16       | Minimum bootloader version   | U32    | R               |

**Tab. 49:** EDS information**Electronic nameplate**

| Index  | Subindex | Description                                 | Type   | Default |
|--------|----------|---------------------------------------------|--------|---------|
| 0x4565 | 0        | Number of supported entries                 | U32    | 5       |
|        | 1        | Version number of the electronic name plate | U32    | 0       |
|        | 2        | Command                                     | U32    | 0       |
|        | 3        | Product serial number                       | String | 0       |
|        | 4        | Item number                                 | String | 0       |
|        | 5        | Product revision                            | String | 0       |

**Tab. 50:** Electronic nameplate

## 7.2 Operating system

We are continuously striving to enhance the operating systems of our products. Enhancing means adding new features, and upgrading existing functions. Current OS files are available for download from our website on the pages of the respective product.

**Info****Further information**

More information on this subject is available on our website.

## 7.2.1 Operating System Update of the Expansion Module

This chapter describes how to carry out an operating system update on the JXM-IO-EX35 expansion module. You have got several options to transfer the OS file to the expansion module:

- By means of the controller
- By means of the command line tool JetEasyDownload (version 1.00.0.15 or higher) from Bucher Automation

### OS update via JetEasyDownload

To update the operating system of a device, use a PEAK CAN dongle and the Bucher Automation command line tool JetEasyDownload (version 1.00.0.15 or higher).

#### Info

#### OS version required

The JXM-IO-EX35 is incompatible with OS file versions < 1.08.0.00. Trying to upload OS file versions < 1.08.0.00 will cause the following:

- JetEasyDownload will abort the process prompting a timeout error.
- The OS presently installed will be deleted.
- The device is stuck in bootloader waiting for a valid OS file.

If the OS import has failed, reset the JXM-IO-EX35. Following a successful reset process, update the device using an OS file version  $\geq 1.08.0.00$ .

### JetEasyDownload parameters

Calling JetEasyDownload requires the applicable specifications parameters.

| Parameter  | Description    | Values                             |                             |
|------------|----------------|------------------------------------|-----------------------------|
| -H<Num>    | Hardware       | 0 =                                | PCAN_ISA1CH                 |
|            |                | 1 =                                | PCAN_ISA2CH                 |
|            |                | 2 =                                | PCAN_PCI_1CH                |
|            |                | 3 =                                | PCAN_PCI_2CH                |
|            |                | 4 =                                | PCAN_PCC_1CH                |
|            |                | 5 =                                | PCAN_PCC_2CH                |
|            |                | 6 =                                | PCAN_USB_1CH                |
|            |                | 7 =                                | PCAN_USB_2CH                |
|            |                | 8 =                                | PCAN_Dongle Pro             |
|            |                | 9 =                                | PCAN_Dongle                 |
|            |                | 10 =                               | PCAN_NET Bucher Automation  |
|            |                | 11 =                               | PCAN_DEV default device     |
|            |                | 20 =                               | IXXAT V2.18                 |
|            |                | 22 =                               | IXXAT V3                    |
|            |                | 100 =                              | CAN hardware detected first |
| -T<nodeID> | Target node ID | The Node ID is given as a decimal. |                             |

| Parameter | Description                                                             | Values                         |         |
|-----------|-------------------------------------------------------------------------|--------------------------------|---------|
| -B<Num>   | Baud rate<br><br><b>Mind the permissible baud rates of your device!</b> | 0 =                            | 10 kBd  |
|           |                                                                         | 1 =                            | 20 kBd  |
|           |                                                                         | 2 =                            | 50 kBd  |
|           |                                                                         | 3 =                            | 100 kBd |
|           |                                                                         | 4 =                            | 125 kBd |
|           |                                                                         | 5 =                            | 250 kBd |
|           |                                                                         | 6 =                            | 500 kBd |
|           |                                                                         | 7 =                            | 1 MBd   |
| -S<Num>   | SDO timeout                                                             | Default                        | 300 ms  |
| -L<name>  | OS file name                                                            | e.g. JXM-IO-EX35_Vx.xx.x.xx.os |         |

**Tab. 51:** JetEasyDownload parameters

## Performing the update

### Info

#### Selecting the CAN dongle

When selecting the CAN hardware, the –H100 parameter gives priority to the hardware detected as connected to the PC. Ensure that the PEAK CAN dongle is the only CAN device connected to the PC, to prevent the selection of the wrong CAN dongle.

- ✓ The JXM-IO-EX35 and the controller are disconnected.
  - ✓ JetEasyDownload and the PEAK CAN dongle are ready for use.
  - ✓ A CAN connection is established between the PEAK CAN dongle and the JXM-IO-EX35.
1. Call up JetEasyDownload with the above parameters and a valid OS file.
    - ⇒ The device carries out a reset.
    - ⇒ The device starts in boot loader mode with a single heartbeat in init state (data = 0x00).
  2. Wait for approx. 7 seconds while the device formats the flash memory.
    - ⇒ The device initiates the download process.
- ⇒ The device starts automatically with the new firmware.

# 8 Parameterization

## 8.1 Concept and control

The concept of the JXM-IO-EX35 device is based on the assignment of interfaces to the inputs and outputs of the device. Each input and output of the device is called a port and can be configured. The function of a port is determined by assigning an interface to it. Any interface contains parameters, value types and a state:

- Parameters can be assigned to each interface.
- Information can be transmitted and set via values to any interface.
- The status provides information about the status of the interface.

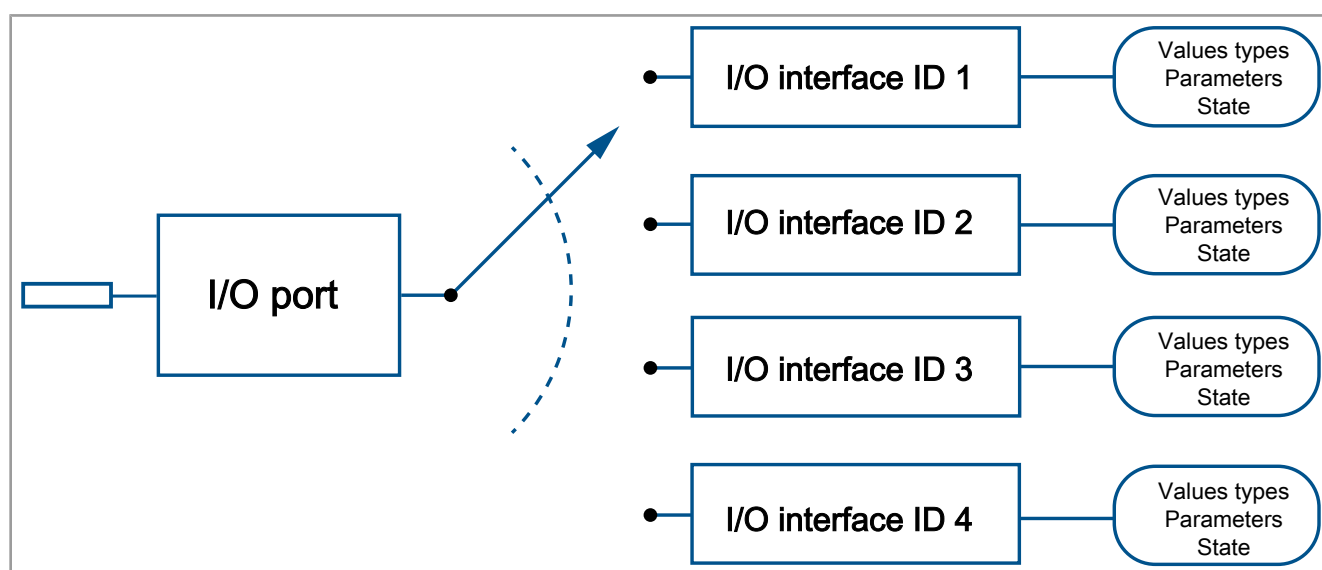


Fig. 14: Concept and control

### 8.1.1 Configuration options of connections

The table below shows an overview of the ports and the respective interfaces:

| Ports         | Description                                              | Supported interfaces                                                                                          |
|---------------|----------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| AI_1 ... AI_4 | Multi-purpose input<br>0 mA ... 24 mA or<br>0 V ... 10 V | INACTIVE<br>AI_VOLTAGE<br>AI_CURRENT<br>DI_PNP                                                                |
| DI_1 ... DI_4 | Digital inputs                                           | INACTIVE<br>DI_PNP<br>DI_NPN<br>FI_PNP<br>FI_NPN<br>ENCI_PNP (for DI_1 and DI_2, as well as<br>DI_3 and DI_4) |

| Ports                          | Description                                               | Supported interfaces                                                      |
|--------------------------------|-----------------------------------------------------------|---------------------------------------------------------------------------|
| PWMI_H3_1 ... PWMI_H3_8        | 3 A high-side PWM output with precise current measurement | INACTIVE<br>PWMO_HS3<br>CPWMO_HS3<br>DO_HS3<br>DI_NPN                     |
| PWMI_HL12_1 ...<br>PWMI_HL12_4 | 12 A half-bridge PWM output with current measurement      | INACTIVE<br>PWMO_HB12<br>PWMO_HB24<br>PWMO_HS12<br>PWMO_HS24<br>PWMO_LS12 |
| PWM_H3_1 ...<br>PWM_H3_8       | 3 A high-side PWM output                                  | PWMO_HS3 DO_HS3 DI_NPN                                                    |

**Tab. 52:** Supported ports and interfaces - Overview

When configuring the outputs, observe the information in chapter [Outputs \[► 18\]](#).

### 8.1.2 I/O ports and SDO map

Each I/O port is mapped with an SDO index.:

| I/O ports                   | SDO index         |
|-----------------------------|-------------------|
| AI_1 ... AI_4               | 0x2100 ... 0x2105 |
| DI_1 ... DI_4               | 0x2106 ... 0x210D |
| PWMI_H3_1 ... PWMI_H3_16    | 0x210e ... 0x2111 |
| PWMI_HL12_1 ... PWMI_HL12_4 | 0x2112 ... 0x2119 |

Use subindex 1 to assign a specific interface to a port. Use the other subindices to access the [Parameters, values and statuses \[► 47\]](#).

| Index                   | Subindex   | Description                 | Type | Access | Default value                      |
|-------------------------|------------|-----------------------------|------|--------|------------------------------------|
| 0x2100<br>...<br>0x2119 | 0          | Number of supported entries | U8   | R      |                                    |
|                         | 1          | I/O interface type          | U32  | R/W    | 0 (disabled)                       |
|                         | 2          | I/O state                   | U32  | R      | 1 (Inactive bit have been set)     |
|                         | 10 ... 29  | Input values                |      | R      |                                    |
|                         | 30 ... 49  | Output values               |      | R/W    | W only in <b>Operational</b> state |
|                         | 50 ... 199 | Parameter                   |      | R/W    |                                    |

**Tab. 53:** Subindices for accessing parameters, values and statuses

### 8.1.3 Overview – I/O interfaces

#### **i Info**

#### **Restrictions**

The following restrictions must be observed in the **Operational** and **Pre-Operational** states:

- You can only assign an interface during the start process while the system is **Pre-Operational** state.
- You can only configure output values while the system is in **Operational** state.  
You can configure parameters in both states.
- If you leave the **Pre-Operational** state, all values are set to 0.
- All outputs are inactive in the **Pre-Operational** state.  
The inputs remain active in the **Pre-Operational** state.

| ID | Interface                                                             | Parameter                                     | Values               | Status                                           |
|----|-----------------------------------------------------------------------|-----------------------------------------------|----------------------|--------------------------------------------------|
| 0  | <b>INACTIVE IO</b>                                                    |                                               |                      | Disabled                                         |
| 1  | <b>AI_VOLTAGE</b><br>Analog<br>voltage input<br>(0 V ... 12 V)        | SENSOR_SUPPLY<br>FILTER_DEEP<br>MIN_DEVIATION | I_VOLTAGE<br>I_RATIO | INACTIVE<br>ERROR<br>OVERVOLTAGE<br>SUPPLY_FAULT |
| 2  | <b>AI_CURRENT</b><br>Analog<br>current input<br>(0 mA ... 24 mA)      | SENSOR_SUPPLY<br>FILTER_DEEP<br>MIN_DEVIATION | I_CURRENT            | INACTIVE<br>ERROR<br>OVERCURRENT<br>SUPPLY_FAULT |
| 3  | <b>DI_PNP</b><br>Digital<br>input<br>(active-high with pull-<br>down) | SENSOR_SUPPLY                                 | I_DIGITAL            | INACTIVE<br>ERROR<br>SUPPLY_FAULT                |

| ID | Interface                                                     | Parameter                                                                                                                                      | Values                                                                                                       | Status                                           |
|----|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------|
| 4  | <b>FI_PNP</b><br>Frequency input (active-high with pull-down) | SENSOR_SUPPLY<br>TIMEOUT_TIME<br>GATE_TIME                                                                                                     | I_FREQUENCY<br>I_DUTY_CYCLE<br>I_DIGITAL<br>I_COUNTER<br>I_PERIODIC_TIME<br>I_H_PULSE_TIME<br>I_L_PULSE_TIME | INACTIVE<br>ERROR<br>SUPPLY_FAULT<br>TIMEOUT     |
| 5  | <b>DI_NPN</b><br>Digital input (active-low with pull-up)      | SENSOR_SUPPLY                                                                                                                                  | I_DIGITAL                                                                                                    | INACTIVE<br>ERROR<br>SUPPLY_FAULT                |
| 6  | <b>PWMO_HS3</b><br>High-side PWM output up to 3 A             | PWM_FRQ<br>DITHER_FRQ<br>DITHER_AMP<br>MAX_CURRENT<br>OVERCURRENT_TIME<br>FILTER_DEEP<br>MIN_DEVIATION<br>MIN_CURRENT<br>OPENCIRCUIT_DETECTION | I_HCURRENT<br>O_DUTY_CYCLE                                                                                   | INACTIVE<br>ERROR<br>OVERCURRENT<br>OPEN_CIRCUIT |
| 7  | <b>DO_HS3</b><br>High-side digital output up to 3 A           | MAX_CURRENT<br>OVERCURRENT_TIME<br>FILTER_DEEP<br>MIN_DEVIATION<br>MIN_CURRENT<br>OPENCIRCUIT_DETECTION                                        | I_HCURRENT<br>O_DIGITAL                                                                                      | INACTIVE<br>ERROR<br>OVERCURRENT<br>OPEN_CIRCUIT |

| ID | Interface                                                              | Parameter                                                                                                                                                                                                                             | Values                                                                                                       | Status                                                        |
|----|------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|
| 10 | <b>CPWMO_HS3</b><br>High-side output up to 3 A<br>with current control | PWM_FRQ<br>DITHER_FRQ<br>DITHER_AMP<br>CURRENT_CONTROL_P<br>CURRENT_CONTROL_I<br>CURRENT_CONTROL_D<br>MAX_CURRENT<br>OVERCURRENT_TIME<br>CURRENT_CONTROL_TIME<br>FILTER_DEEP<br>MIN_DEVIATION<br>MIN_CURRENT<br>OPENCIRCUIT_DETECTION | I_HCURRENT<br>O_HCURRENT                                                                                     | INACTIVE<br>ERROR<br>OVERCURRENT<br>OPEN_CIRCUIT<br>CC_UNLOCK |
| 13 | <b>FI_NPN</b><br>Frequency<br>input<br>(active-low with pull-up)       | SENSOR_SUPPLY<br>TIMEOUT_TIME<br>GATE_TIME                                                                                                                                                                                            | I_FREQUENCY<br>I_DUTY_CYCLE<br>I_DIGITAL<br>I_COUNTER<br>I_PERIODIC_TIME<br>I_H_PULSE_TIME<br>I_L_PULSE_TIME | INACTIVE<br>ERROR<br>SUPPLY_FAULT<br>TIMEOUT                  |

| ID | Interface                                                                                                                | Parameter                                                                                                                                      | Values                     | Status                                           |
|----|--------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|--------------------------------------------------|
| 16 | <b>PWMO_LS12</b><br>Low-side PWM output up to 12 A                                                                       | PWM_FRQ<br>DITHER_FRQ<br>DITHER_AMP<br>MAX_CURRENT<br>OVERCURRENT_TIME<br>FILTER_DEEP<br>MIN_DEVIATION<br>MIN_CURRENT<br>OPENCIRCUIT_DETECTION | I_HCURRENT<br>O_DUTY_CYCLE | INACTIVE<br>ERROR<br>OVERCURRENT<br>OPEN_CIRCUIT |
| 17 | <b>PWMO_HS12</b><br>High-side PWM output up to 12 A                                                                      | PWM_FRQ<br>DITHER_FRQ<br>DITHER_AMP<br>MAX_CURRENT<br>OVERCURRENT_TIME<br>FILTER_DEEP<br>MIN_DEVIATION<br>MIN_CURRENT<br>OPENCIRCUIT_DETECTION | I_HCURRENT<br>O_DUTY_CYCLE | INACTIVE<br>ERROR<br>OVERCURRENT<br>OPEN_CIRCUIT |
| 18 | <b>PWMO_HB12</b><br>Half-bridge PWM output up to 12 A.<br><br>Note: Default: low-side (only in <b>Operational</b> state) | PWM_FRQ<br>DITHER_FRQ<br>DITHER_AMP<br>MAX_CURRENT<br>OVERCURRENT_TIME<br>FILTER_DEEP<br>MIN_DEVIATION<br>MIN_CURRENT<br>OPENCIRCUIT_DETECTION | I_HCURRENT<br>O_DUTY_CYCLE | INACTIVE<br>ERROR<br>OVERCURRENT<br>OPEN_CIRCUIT |

| ID | Interface                                                                        | Parameter                                                                                                                                      | Values                     | Status                                           |
|----|----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|--------------------------------------------------|
| 19 | <b>AI_TEMPERATURE</b><br>Temperature input                                       | MIN_DEVIATION<br><b>NOTICE! Reduce the MIN_DEVIATION value, if necessary!</b><br>MIN_TEMPERATURE<br>MAX_TEMPERATURE                            | I_TEMPERATURE              | INACTIVE<br>ERROR<br>TEMPERATUREFAULT            |
| 24 | <b>PWMO_HS24</b><br>High-side half-bridge paralleled port up to 24 A (2 x 12 A)  | PWM_FRQ<br>DITHER_FRQ<br>DITHER_AMP<br>MAX_CURRENT<br>OVERCURRENT_TIME<br>FILTER_DEEP<br>MIN_DEVIATION<br>MIN_CURRENT<br>OPENCIRCUIT_DETECTION | I_HCURRENT<br>O_DUTY_CYCLE | INACTIVE<br>ERROR<br>OVERCURRENT<br>OPEN_CIRCUIT |
| 25 | <b>PWMO_HB24</b><br>Half bridge paralleled PWM output port up to 24 A (2 x 12 A) | PWM_FRQ<br>DITHER_FRQ<br>DITHER_AMP<br>MAX_CURRENT<br>OVERCURRENT_TIME<br>FILTER_DEEP<br>MIN_DEVIATION<br>MIN_CURRENT<br>OPENCIRCUIT_DETECTION | I_HCURRENT<br>O_DUTY_CYCLE | INACTIVE<br>ERROR<br>OVERCURRENT<br>OPEN_CIRCUIT |
| 26 | <b>ENCI_PNP</b><br>Incremental encoder input                                     | SENSOR_SUPPLY<br>TIMEOUT_TIME<br>RESOLUTION                                                                                                    | I_COUNTER<br>I_DIRECTION   | INACTIVE<br>ERROR<br>SUPPLY_FAULT                |

**Tab. 54:** Available interfaces, parameters, values and statuses

## 8.1.4 Parameters, values and statuses

### General entries

| Subindex | Parameter type | Designation | Type | Access | Unit                    |
|----------|----------------|-------------|------|--------|-------------------------|
| 1        | IO_TYPE        | Port type   | U32  | R/W*1  |                         |
| 2        | IO_STATUS      | Port status | U32  | R      | See I/O interface state |

### Input values

| Subindex |                 | Description                                    | Type | Access | Value range                         |
|----------|-----------------|------------------------------------------------|------|--------|-------------------------------------|
| 10       | I_VOLTAGE       | Voltage value                                  | U16  | R      | 0 ... 12,000<br>1 mV increment      |
| 11       | I_RATIO         | Ratio to VBAT_ECU                              | U16  | R      | 0.1 % increment                     |
| 12       | I_CURRENT       | Current value (small measuring range)          | U16  | R      | 0 ... 20,000<br>1 µA increment      |
| 13       | I_HCURRENT      | Current value (large measuring range)          | I16  | R      | 1 mA increment                      |
| 14       | I_FREQUENCY     | Frequency value; counting the GATE-TIME pulses | U32  | R      | 0.1 ... 10,000<br>0.1 Hz increment  |
| 15       | I_DUTY_CYCLE    | PWM duty cycle                                 | U16  | R      | 0.1 % increment                     |
| 16       | I_DIGITAL       | Digital value                                  | Bool | R      | 0 or 1                              |
| 17       | I_COUNTER       | Count value                                    | U32  | R      | 0 ... 4294967295                    |
| 18       | I_PERIODIC_TIME | Periodic time; reads the period duration       | U32  | R      | 1 µs increment                      |
| 19       | I_HPULS_TIME    | High-pulse time, reads the high-pulse duration | U32  | R      | 1 µs increment                      |
| 20       | I_LPULS_TIME    | Low-pulse time, reads the low-pulse duration   | U32  | R      | 1 µs increment                      |
| 21       | I_TEMPERATURE   | Temperature measuring range                    | I32  | R      | -45 °C ... 150 °C<br>1 °C increment |

| Subindex |             | Description                  | Type | Access | Value range                                               |
|----------|-------------|------------------------------|------|--------|-----------------------------------------------------------|
| 22       | I_DIRECTION | Actual direction of rotation | U8   | R      | 0 ... 2<br>0 = no movement<br>1 = Forward<br>2 = Backward |

Tab. 55: Input values

**Output values**

| Subindex |              | Description       | Type | Value range |
|----------|--------------|-------------------|------|-------------|
| 30       | O_DIGITAL    | Digital value     | Bool | 1 or 0      |
| 31       | O_DUTY_CYCLE | PWM duty cycle    | U16  | 0.1 %       |
| 32       | O_HCURRENT   | Set current value | U16  | 1 mA        |

Tab. 56: Output values

**Parameter**

| Subindex type |                   | Description                                        | Type | Access | Unit/<br>value range                                                      |
|---------------|-------------------|----------------------------------------------------|------|--------|---------------------------------------------------------------------------|
| 50            | SENSOR_SUPPLY     | Associated sensor supply, which is also monitored. | U16  | R/W    | 0 = OFF<br>1 = VEXT_SEN_1<br>2 = VEXT_SEN_2<br>3 = VREF_SEN<br>Default: 0 |
| 51            | PWM_FRQ           | PWM frequency                                      | U32  | R/W    | 0.1 Hz<br>Default: 1 kHz                                                  |
| 52            | DITHER_FRQ        | Dithering frequency                                | U32  | R/W    | 0.1 Hz<br>Default = 1,000                                                 |
| 53            | DITHER_AMP        | Dither amplitude                                   | U16  | R/W    | 0.1 %,<br>Default = 0                                                     |
| 54            | CURRENT_CONTROL_P | Current control: P term x1000000                   | U32  | R/W    | Default: 100,000                                                          |

| Subindex type |                      | Description                                                                                                                                                          | Type | Access | Unit/<br>value range                                                   |
|---------------|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|--------|------------------------------------------------------------------------|
| 55            | CURRENT_CONTROL_I    | Current control: I term x1000000                                                                                                                                     | U32  | R/W    | Default: 10,000                                                        |
| 56            | CURRENT_CONTROL_D    | Current control: D term x1000000                                                                                                                                     | U32  | R/W    | Default: 400                                                           |
| 57            | MAX_CURRENT          | Maximum current<br>Cannot exceed the values configured for the inter-<br>face type                                                                                   | U16  | R/W    | 1 mA (10,000 max)<br>Default:<br>– 3 A for PWMi_H3<br>– 7 A for PWM_H7 |
| 58            | OVERCURRENT_TIME     | Switches off after the set time period has elapsed                                                                                                                   | U32  | R/W    | Default: 500 ms                                                        |
| 59            | TIMEOUT_TIME         | Sets the TIMEOUT bit in the status during frequency<br>measurement, if no signal change is present. De-<br>fines the point where I_DIRECTION signals no<br>movement. | U32  | R/W    | 1 ms<br>Default: 1,000 ms                                              |
| 60            | CURRENT_CONTROL_TIME | Current control cycle time                                                                                                                                           | U32  | R/W    | 5 ms<br>Default: ms                                                    |
| 61            | FILTER_DEEP          | Moving average calculation depth                                                                                                                                     | U32  | R/W    | 1 ... 32<br>Default: 1                                                 |
| 62            | GATE_TIME            | Measuring time of the frequency measurement                                                                                                                          | U32  | R/W    | 1,000 ms                                                               |
| 63            | MIN_DEVIATION        | Minimum deviation for AI input values                                                                                                                                | U16  | R/W    | µA, mV or °C<br>Default: 10                                            |
| 64            | MIN_CURRENT          | If less current flows at the output than the set<br>threshold, this is detected as a cable break and the<br>OPEN_LOAD status is set.                                 | U16  | R/W    | 1 mA                                                                   |

| Subindex type |                           | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Type | Access | Unit/<br>value range                                                                                                                                                                                                |
|---------------|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 65            | OPENCIRCUIT_<br>DETECTION | <p>Enables/disables cable break detection of a port.</p> <p>Once during bootup, <b>mode 1</b> checks for any load pulling the output towards GND.</p> <p>In powered-up state, <b>mode 2</b> additionally checks if the current level falls short of MIN_CURRENT.</p> <p><b>NOTICE! Do NOT use mode 2 (permanent cable break detection) with PWM outputs and current-controlled outputs as this may cause the system to detect a cable break where there is none.</b></p> | U16  | R/W    | <p>0 = No cable break detection</p> <p>1 = Cable break detection only in <b>Pre-Operational</b> state (not permissible for half bridges)</p> <p>2 = Cable break detection permanently enabled</p> <p>Default: 1</p> |
| 66            | MIN_TEMPERATURE           | If the temperature falls short of the minimum permissible value, the TEMPERATUREFAULT status is set.                                                                                                                                                                                                                                                                                                                                                                     | I16  | R/W    | <p>-45 °C</p> <p>1 °C increment</p>                                                                                                                                                                                 |
| 67            | MAX_TEMPERATURE           | If the temperature exceeds the minimum permissible value, the TEMPERATUREFAULT status is set.                                                                                                                                                                                                                                                                                                                                                                            | I16  | R/W    | <p>150 °C</p> <p>1 °C increment</p>                                                                                                                                                                                 |
| 68            | RESOLUTION                | Resolution, e.g. Of the encoder input                                                                                                                                                                                                                                                                                                                                                                                                                                    | U8   | R/W    | <p>0 ... 2</p> <p>0 =</p> <p>1/4 resolution</p> <p>1 =</p> <p>1/2 resolution</p> <p>2 =</p> <p>Full resolution</p> <p>Default: 0</p>                                                                                |

**Status**

| Bit        | Status           | Description                                           |
|------------|------------------|-------------------------------------------------------|
| 0x00000001 | INACTIVE         | This port is disabled.                                |
| 0x00000002 | ERROR            | An undefined error has occurred.                      |
| 0x00000008 | OVERVOLTAGE      | Overvoltage is present at the input.                  |
| 0x00000010 | OVERCURRENT      | Overcurrent is present at the input/output.           |
| 0x00000020 | SUPPLY_FAULT     | The supply voltage VEXT_SEN is not correct.           |
| 0x00000040 | TEMPERATUREFAULT | The temperature is out of range                       |
| 0x00000080 | OPEN_CIRCUIT     | No load at the output, e.g. in case of cable break    |
| 0x00000100 | TIMEOUT          | The time for frequency measurement has been exceeded. |
| 0x00000200 | CC_UNLOCK        | The current control is not within the control range   |

**Tab. 57:** Status

## 8.2 Setting the node ID

The configuration inputs (CFG1 and CFG2) create an offset relative to the set base node ID. CFG1 and CFG2 may have one of the following 3 states:

- Jumpered to GND → Low L
- Jumpered to VBAT → High H
- Open → O

The offset corresponds to the values in the following table:

| CFG1 | CFG2 | Offset of module ID |
|------|------|---------------------|
| O    | O    | 0                   |
| L    | O    | 1                   |
| H    | O    | 2                   |
| O    | L    | 3                   |
| L    | L    | 4                   |
| H    | L    | 5                   |
| O    | H    | 6                   |
| L    | H    | 7                   |
| H    | H    | 8                   |

To implement the states, connect the pins of the CFG connector (X12) as follows using the **node ID connectors** ► 72]:

|                                                                                     |              |          |
|-------------------------------------------------------------------------------------|--------------|----------|
|  | <b>X12:1</b> | VBAT_ECU |
|                                                                                     | <b>X12:2</b> | CFG1     |
|                                                                                     | <b>X12:3</b> | GND_PWR  |
|                                                                                     | <b>X12:4</b> | CFG2     |

**Tab. 58:** CFG connector (X12) pinout

| CFG pin jumpers | Node ID offset |
|-----------------|----------------|
| -               | 0              |
| 2 – 3           | 1              |
| 1 – 2           | 2              |
| 3 – 4           | 3              |
| 2 – 3 – 4       | 4              |
| 1 – 2 and 3 – 4 | 5              |
| 1 – 4           | 6              |
| 2 – 3 and 1 – 4 | 7              |
| 1 – 2 and 1 – 4 | 8              |

**Tab. 59:** CFG pin jumpers

 **Info**
**Sealing unused connectors**

Seal unused connectors with a **dummy plug** [▶ 72](#). A dummy plug is also used to set the node ID 00.

## 8.3 Diagnostic information

### Diagnostic information

| Index  | Subindex | Description                 | Type | Types of access | Unit   |
|--------|----------|-----------------------------|------|-----------------|--------|
| 0x2000 | 0        | Number of supported entries | U8   | R               |        |
|        | 1        | VBAT_PWR                    | U16  | R               | mV     |
|        | 2        | 7 V                         | U16  | R               | mV     |
|        | 3        | 3V3                         | U16  | R               | mV     |
|        | 4        | 3VD                         | U16  | R               | mV     |
|        | 5        | PCB temperature             | I16  | R               | 0.1 °C |
|        | 6        | CPU temperature             | I16  | R               | 0.1 °C |
|        | 7        | CPU VREF                    | U16  | R               | mV     |
|        | 8        | VEXT_SEN_1                  | U16  | R               | mV     |
|        | 9        | VEXT_SEN_2                  | U16  | R               | mV     |
|        | 10       | 12 V                        | U16  | R               | mV     |
|        | 11       | VBAT_ECU                    | U16  | R               | mV     |
|        | 12       | CFG1                        | U16  | R               | mV     |
|        | 13       | CFG2                        | U16  | R               | mV     |
|        | 14       | Total current               | U32  | R               | mA     |
|        | 15       | VREF_SEN_1                  | U16  | R               | mV     |

**Tab. 60:** Diagnostic information

### Status information

| Index  | Subindex | Description              | Type | Types of access |
|--------|----------|--------------------------|------|-----------------|
| 0x1001 | 0        | Error register           | U8   | R               |
|        | Bit 0    | General error            |      | R               |
|        | Bit 1    | Total overcurrent        |      | R               |
|        | Bit 3    | Temperature              |      | R               |
|        | Bit 4    | Communication error      |      | R               |
|        | Bit 7    | CI error (invalid input) |      | R               |

**Tab. 61:** Status information

## 8.4 Saving settings permanently and resetting to default values

The following parameters are permanently stored in the EEPROM:

- PDO Mapping
- All I/O interface assignments and parameters
- Producer heartbeat time

### Saving the settings

| Index  | Subindex | Description                                                                                                                                                                                                             | Type | Access | Default value |
|--------|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|--------|---------------|
| 0x1010 | 0        | Number of supported entries                                                                                                                                                                                             | U8   | R      | 1             |
|        | 1        | Saving all parameters<br><br>When the specific signature 0x65766173 ("save") is written, the parameters are saved.<br><br><b>NOTICE! When using CodeSys, write the signature in reverse order: 0x73617665 („evas“).</b> | U32  | R/W    |               |

Tab. 62: Saving settings to EEPROM

### Resetting the settings to their default values

| Index  | Subindex | Description                                                                                                                                                                                                     | Type | Access | Default value |
|--------|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|--------|---------------|
| 0x1011 | 0        | Number of supported entries                                                                                                                                                                                     | U8   | R      | 1             |
|        | 1        | Command register<br><br>Writing the specific signature 0x64616F6C ("load") resets all settings to default.<br><br><b>NOTICE! When using CodeSys, write the signature in reverse order: 0x6C6F6164 („daol“).</b> | U32  | R/W    | 1             |

Tab. 63: Resetting the settings to their default values

#### Info

#### Loading the settings from the EEPROM

During bootup, the last saved settings are automatically loaded.  
During a firmware update, the settings may be reset to the default values.

### Setting parameters

The parameters are set as follows:

1. The vehicle controller configures the parameters of the JXM-IO-EX35.
2. The vehicle controller stores the settings in the EEPROM via index 0x1010.
3. The vehicle controller reads the CRC via index 0x4556 subindex 1 and saves this value locally in a remanent memory.
4. Following JXM-IO-EX35 reboot, the vehicle controller checks the CRC value in the local memory against the value in index 0x4556 subindex 1. If the values do not match, parameterization must be restarted.

#### Info

#### Activating the Changes

The changes to the indexes 0x1010 and 0x1011 only become active after a restart.

## 8.5 System parameters

| Index  | Subindex | Description                                                                                                                         | Type | Access | Default value |
|--------|----------|-------------------------------------------------------------------------------------------------------------------------------------|------|--------|---------------|
| 0x4556 | 0        | Number of supported entries                                                                                                         | U8   | R      | 4             |
|        | 1        | CRC of the currently applied parameter settings*<br>The CRC checks whether the settings need to be transferred to the device again. | U32  | R      |               |
|        | 3        | CAN baud rate                                                                                                                       | U8   | R/W    | 1             |
|        |          | 0: 125 kBd                                                                                                                          |      |        |               |
|        |          | 1: 250 kBd (default)                                                                                                                |      |        |               |
|        |          | 2: 500 kBd                                                                                                                          |      |        |               |
|        |          | 3: 1 MBd                                                                                                                            |      |        |               |
|        | 4        | CANopen node ID to be used in the future (without config pins)                                                                      | U8   | R/W    |               |
|        | 5        | CANopen node ID being used currently (without config pins)                                                                          | U8   | R      |               |
|        | 6        | Offset to base node ID (config pins)                                                                                                | U8   | R      | 0             |

**Tab. 64:** System parameters

\*The CRC is calculated using the current parameter values described in chapter [Saving settings permanently and resetting to default values](#) [► 54].

### Info

#### Activating the set system parameters

You can only use the set system parameters after restarting the system.

## 8.6 Mapping of Process Data Objects (PDOs)

The following parameters let you set the transmit PDOs (TPDO 1 ... 4) and receive PDOs (RPDO 1 ... 4).

### Info

#### Further information

For in-depth information, see the *CANopen STX API* application-oriented manual.

For application-oriented manuals open [www.bucherautomation.com](http://www.bucherautomation.com) and go to *product page JXM-IO-EX35 > Product-independent documentation*.

#### Validity of a PDO

The MSB (most significant bit) of the COB ID lets you determine the validity of a PDO. To map a PDO, first set the PDO to invalid (bit 31 = 1) and then to valid (bit 31 = 0).

| Bit      | Value | Description                                              |
|----------|-------|----------------------------------------------------------|
| 31 (MSB) | 0     | PDO exists/is valid                                      |
|          | 1     | PDO does not exist/is invalid                            |
| 30       | 0     | RTR (Remote Transmission Request) permitted for this PDO |
|          | 1     | No RTR allowed for this PDO                              |
| 29       | 0     | 11-bit ID (CAN 2.0A)                                     |
|          | 1     | 29-bit ID (CAN 2.0B)                                     |

| Bit            | Value | Description                                        |
|----------------|-------|----------------------------------------------------|
| 28 ... 11      | 0     | If bit 29 = 0                                      |
|                | X     | If bit 29 = 1: Bits 28 ... 11 of the 29-bit COB ID |
| 10 ... 0 (LSB) | X     | Bits 10 ... 0 of the COB ID                        |

Tab. 65: Validity of a PDO

### 8.6.1 RPDO communication parameters

| Index                   | Subindex | Description                               | Type | Types of access | Unit   | Default value           |                    |
|-------------------------|----------|-------------------------------------------|------|-----------------|--------|-------------------------|--------------------|
| 0x1400<br>...<br>0x1403 | 0        | Number of supported entries               | U8   | R               |        | 0                       |                    |
|                         | 1        | COB ID (user-configurable value for PDOs) | U32  | R/W             |        | RPDO 1:<br>Index 0x1400 | 0x200<br>+ Node-ID |
|                         |          |                                           |      |                 |        | RPDO 2:<br>Index 0x1401 | 0x300<br>+ Node-ID |
|                         |          |                                           |      |                 |        | RPDO 3:<br>Index 0x1402 | 0x400<br>+ Node-ID |
|                         |          |                                           |      |                 |        | RPDO 4:<br>Index 0x1403 | 0x500<br>+ Node-ID |
|                         | 2        | Transmission Type                         | U8   | R               |        | Acyclic type = 0        |                    |
|                         | 3        | Inhibit Time                              | U16  | R/W             | 0.1 ms | 10 (1 ms)               |                    |
|                         | 5        | Event Time                                | U16  | R/W             | 1 ms   | 10 (10 ms)              |                    |

Tab. 66: RPDO communication parameters



#### Info

#### Writing communication parameters

To write communication parameters, the JXM-IO-EX35 device must be in **Pre-Operational** state.

## 8.6.2 TPDO communication parameters

| Index                   | Subindex | Description                               | Type | Types of access | Unit   | Default value           |                    |
|-------------------------|----------|-------------------------------------------|------|-----------------|--------|-------------------------|--------------------|
| 0x1800<br>...<br>0x1803 | 0        | Number of supported entries               | U8   | R               |        | 0                       |                    |
|                         | 1        | COB ID (user-configurable value for PDOs) | U32  | R/W             |        | TPDO 1:<br>Index 0x1800 | 0x180<br>+ Node-ID |
|                         |          |                                           |      |                 |        | TPDO 2:<br>Index 0x1801 | 0x280<br>+ Node-ID |
|                         |          |                                           |      |                 |        | TPDO 3:<br>Index 0x1802 | 0x380<br>+ Node-ID |
|                         |          |                                           |      |                 |        | TPDO 4:<br>Index 0x1803 | 0x480<br>+ Node-ID |
|                         | 2        | Transmission Type                         | U8   | R               |        | Acyclic type = 0        |                    |
|                         | 3        | Inhibit Time                              | U16  | R/W             | 0.1 ms | 10 (1 ms)               |                    |
|                         | 5        | Event Time                                | U16  | R/W             | 1 ms   | 10 (10 ms)              |                    |

Tab. 67: TPDO communication parameters



### Info

#### Writing communication parameters

To write communication parameters, the JXM-IO-EX35 device must be in **Pre-Operational** state.

## 8.6.3 Mapping tables

### RPDO mapping table

| Index                   | Subindex | Description                          | Type | Access | Default value |
|-------------------------|----------|--------------------------------------|------|--------|---------------|
| 0x1600<br>...<br>0x1603 | 0        | Number of supported entries          | U8   | R/W    | 0             |
|                         | 1        | 1 <sup>st</sup> object being mapped  | U32  | R/W    |               |
|                         | 2        | 2 <sup>nd</sup> object being mapped  | U32  | R/W    |               |
|                         | ...      | ...                                  | U32  | R/W    |               |
|                         | 64       | 64 <sup>th</sup> object being mapped | U32  | R/W    |               |

Tab. 68: RPDO mapping table

### TPDO mapping table

| Index                   | Subindex | Description                          | Type | Access | Default value |
|-------------------------|----------|--------------------------------------|------|--------|---------------|
| 0x1A00<br>...<br>0x1A03 | 0        | Number of supported entries          | U8   | R/W    | 0             |
|                         | 1        | 1 <sup>st</sup> object being mapped  | U32  | R/W    |               |
|                         | 2        | 2 <sup>nd</sup> object being mapped  | U32  | R/W    |               |
|                         | ...      | ...                                  | U32  | R/W    |               |
|                         | 64       | 64 <sup>th</sup> object being mapped | U32  | R/W    |               |

Tab. 69: TPDO mapping table

## Mapping entry U32

| Byte    | 0          | 1        | 2 and 3 |
|---------|------------|----------|---------|
| Content | Bit length | Subindex | Index   |

Tab. 70: Mapping entry U32

### 8.6.4 Sending interface input values via TPDO

To send interface input values via TPDO, proceed as follows:

1. Switch the JXM-IO-EX35 to **Pre-Operational** state.
2. Assign the desired interface.
3. Invalidate the TxPDO object.
4. Disable the mapping.
5. Enter the mapping value.
6. Enable the mapping.
7. Validate the TxPDO object.
8. Switch the JXM-IO-EX35 to **Operational** state.

### STX example

The following STX example shows you in part how you can output the value AI1 Voltage on TPDO1.

```
//Switch JXM-IO-EX35 to Pre-Operational state
CanOpenSetCommand(
cCanChannel, CAN_CMD_NMT, CAN_CMD_NMT_Value(
cJXMNodeId, CAN_NMT_PREOPERATIONAL));

//AI_1 port type to AI_VOLTAGE (=1)
iTemp := 1;
CanOpenDownloadSDO(
cCanChannel, cJXMNodeId, 0x2100, 1, CANOPEN_DWORD, 4, iTemp, iBusy);
when SDOACCESS_FINISHED(iBusy) continue;

//Invalidating TxPDO object, setting uppermost bit to 1
dTemp := 0x80000000+0x180+;
CanOpenDownloadSDO(
cCanChannel, cJXMNodeId, 0x1800, 1, CANOPEN_DWORD, 4, dTemp, iBusy);
when SDOACCESS_FINISHED(iBusy) continue;

//Disabling mapping
dTemp := 0;
CanOpenDownloadSDO(
cCanChannel, cJXMNodeId, 0x1a00, 0, CANOPEN_BYTE, 1, dTemp, iBusy);
when SDOACCESS_FINISHED(iBusy) continue;

//Entering value for AI1 voltage
dTemp := 0x2100a10; // Index: 0x2100, subindex 0x0a = 10, length 0x10 = 16
bits
CanOpenDownloadSDO(
cCanChannel, cJXMNodeId, 0x1a00, 1, CANOPEN_DWORD, 4, dTemp, iBusy);
when SDOACCESS_FINISHED(iBusy) continue;
```

```
//Enabling mapping
dTemp := 1; // Number of mapping entries
CanOpenDownloadSDO(
cCanChannel, cJXMNodeId, 0x1a00, 0, CANOPEN_BYTE, 1, dTemp, iBusy);
when SDOACCESS_FINISHED(iBusy) continue;

//Validating object, setting uppermost bit to 0, specifying PDO COB
dTemp := 0x180+;
CanOpenDownloadSDO(
cCanChannel, cJXMNodeId, 0x1800, 1, CANOPEN_DWORD, 4, dTemp, iBusy);
when SDOACCESS_FINISHED(iBusy) continue;

//Switch JXM-IO-EX35 to Operational state
CanOpenSetCommand(
cCanChannel, CAN_CMD_NMT, CAN_CMD_NMT_Value(
cJXMNodeId, CAN_NMT_OPERATIONAL));
```

## 8.7 Frequency measurement at the digital inputs

For the frequency measurement at the digital inputs 2 measuring methods are available:

- Gating measurement
- Pulse length measurement

### Gating measurement

The gate time (GATE\_TIME) is the time period during which pulses are counted. Measurements of high-frequency signals can thus be easily recorded. The values I\_FREQUENCY and I\_PERIODIC\_TIME are determined using this method.

In order to achieve the resolution of 0.1 Hz for low frequency signals, the gate time must be adjusted accordingly. The maximum gate time is 10 seconds.

#### Info

##### Gate time and update rate

A gate time of 10 s means that the update rate is also 10 s.

### Pulse length measurement

This method is suitable for the resolution of low frequencies. It is based on the time between the edge changes. To do this, it is necessary to calculate the values I\_HPULSE\_TIME and I\_LPULSE\_TIME externally:

$$f[\text{mHz}] = 10^9 / (I\_HPULSE\_TIME + I\_LPULSE\_TIME)$$

#### Info

##### Decrease of resolution

In pulse length measurement, the resolution decreases with increasing frequency.

## 8.8 Acquisition of encoder signals

The ENCI\_PNP interface lets you acquire encoder signals. The encoder inputs do not feature debouncing.

#### Info

##### Automatic Configuration of the Inputs as ENCI\_PNP







For the acquisition of encoder signals always 2 inputs are required.

If, for example, you configure input DI\_P\_3 as ENCI\_PNP, the adjacent input DI\_P\_4 is automatically configured as ENCI\_PNP.

If you reconfigure one of the two inputs, the adjacent input automatically becomes IN-ACTIVE - no encoder signals are acquired any more.

Resolution

You can set the resolution using the RESOLUTION parameter.
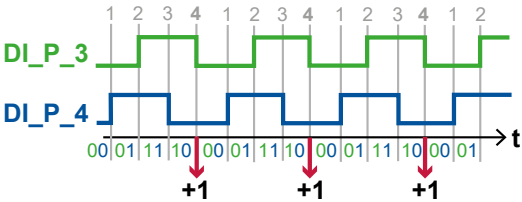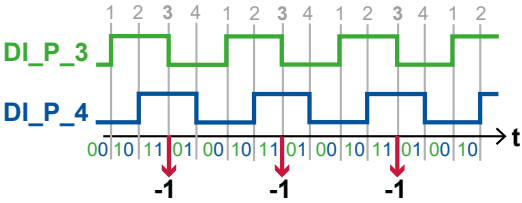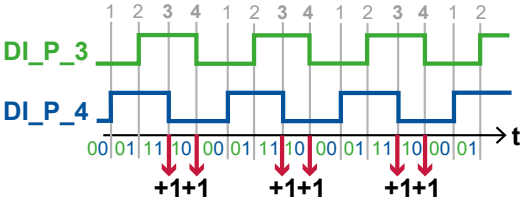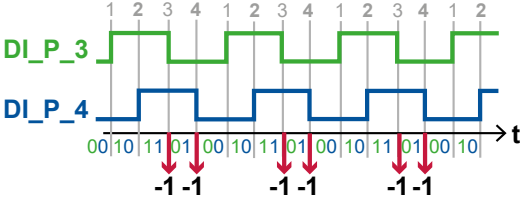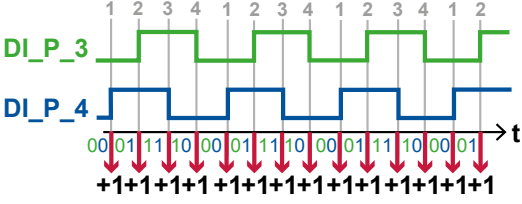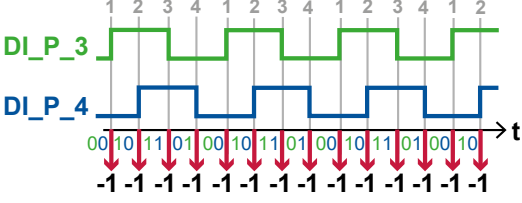
| RESOLUTION     | Direction | Resolution                                                                           |
|----------------|-----------|--------------------------------------------------------------------------------------|
| 0<br>(Default) | Forward   |    |
|                | Reverse   |    |
| 1              | Forward   |   |
|                | Reverse   |  |
| 2              | Forward   |  |
|                | Reverse   |  |

Tab. 71: Resolution of the encoder signals

Input values for ENCI\_PNP

You can query the following Input values:

| Input value | Description                                 | PDO send condition |
|-------------|---------------------------------------------|--------------------|
| I_COUNTER   | 32-bit counter running forward and backward | Event Time         |
| I_DIRECTION | Current direction                           | In case of change  |

**Tab. 72:** Input values for ENCI\_PNP

### Signaling standstill

The TIMEOUT\_TIME parameter allows you to specify the time required to elapse before a standstill is signaled. The default value is 1,000 ms, i.e. if no more pulses are received for 1,000 ms, then I\_DIRECTION = 0.

## 8.9 NMT commands

The JXM-IO-EX35 supports the following NMT commands:

| NMT commands   | Description                                                                                          |
|----------------|------------------------------------------------------------------------------------------------------|
| RESET          | Resets the JXM-IO-EX35                                                                               |
| PREOPERATIONAL | Switches to <b>Pre-Operational</b> state                                                             |
| OPERATIONAL    | Switches to <b>Operational</b> state                                                                 |
| START          | Starts the JXM-IO-EX35                                                                               |
| STOP           | Stops the JXM-IO-EX35, the JXM-IO-EX35 continues to send heartbeat signals and process NMT commands. |

**Tab. 73:** Supported NMT commands

## 8.10 Troubleshooting

### Emergency object telegrams (EMCY telegrams)

EMCY telegrams are sent at startup or after any changes at an inhibit time of 50 ms.

| Byte      | Contents                                  |               |
|-----------|-------------------------------------------|---------------|
| 0 ... 1 = | Emergency Error Code                      |               |
| 2 =       | Error register                            | Object 0x1001 |
| 3 =       | I/O offset 0x21nn, where nn is the offset |               |
| 4 ... 7 = | Manufacturer-specific „error field“ entry |               |
|           | Always 0 is sent.                         |               |

Tab. 74: Byte values of Emergency objects

### Error memory (error history)

The EMCY errors are stored in a stacked memory. Subindex 1 provides access to the latest error.

| Byte      | Contents                                  |               |
|-----------|-------------------------------------------|---------------|
| 0 ... 1 = | Emergency Error Code                      |               |
| 2 =       | Error register                            | Object 0x1001 |
| 3 =       | I/O offset 0x21nn, where nn is the offset |               |

Tab. 75: Byte values of the error memory

The error memory can be accessed via index 0x1003.

| Index  | Subindex  | Description                                                      | Type | Types of access | Default value |
|--------|-----------|------------------------------------------------------------------|------|-----------------|---------------|
| 0x1003 | 0         | Number of errors                                                 | U8   | R/W             | 0             |
|        |           | Entering 0 clears the entire memory. Values > 0 are not allowed. |      |                 |               |
|        | 1         | Latest „Error Field“ entry                                       | U32  | R               |               |
|        | 2 ... 254 | Other current "Error Field" entries                              | U32  | R               |               |

Tab. 76: Subindexes of the error memory

### Emergency Error Codes

| Code   | Description                                       |
|--------|---------------------------------------------------|
| 0x0000 | No error or error reset                           |
| 0x1000 | Generic error                                     |
| 0x2300 | Total current is too high                         |
| 0x3100 | Voltage exceeding the required tolerance range    |
| 0x4200 | Device temperature is too high                    |
| 0x8110 | CAN data overrun (lost objects)                   |
| 0x8130 | Life guard error or heartbeat error               |
| 0x8140 | Recovered from <b>Bus-Off</b> state               |
| 0x8210 | Processing errors due to incorrect length of PDOs |
| 0x8220 | PDO length exceeded                               |

| Code   | Description                       |
|--------|-----------------------------------|
| 0xff00 | Configuration error on the device |
| 0xff01 | I/O-Port OVERVOLTAGE              |
| 0xff02 | I/O-Port OVERCURRENT              |
| 0xff03 | I/O-Port SUPPLYFAULT              |
| 0xff05 | I/O-Port OPEN_CIRCUIT             |
| 0xff06 | I/O-Port TIMEOUT                  |
| 0xff07 | I/O-Port CC_UNLOCK                |

Tab. 77: Emergency Error Codes

### 8.10.1 Heartbeat

The device sends a heartbeat message cyclically as soon as it is in the **Pre-Operational** state.

| Index  | Subindex | Description                   | Type | Types of access | Default value |
|--------|----------|-------------------------------|------|-----------------|---------------|
| 0x1017 | 0        | Producer heartbeat time in ms | U16  | R/W             | 1000          |

Tab. 78: Index of the heartbeat message

#### Heartbeat monitoring

The number of heartbeats to be monitored can be set via the controller with the corresponding master node ID and corresponding timeout. If the device does not detect a heartbeat within the specified timeout period (e.g. in the event of a communication interruption), the device switches to the **Stopped** state and the outputs are de-energized.

| Index  | Subindex | Description                          | Type | Types of access | Default value |
|--------|----------|--------------------------------------|------|-----------------|---------------|
| 0x1016 | 0        | Number of heartbeats to be monitored | U8   | R/W             | 0             |
|        | 1 ... 4  | Node ID to be monitored and timeout  | U32  | R/W             |               |
|        |          | <b>MSB</b>                           |      |                 |               |
|        |          | <b>Bits</b>                          |      |                 |               |
|        |          | <b>Value</b>                         |      |                 |               |
|        |          |                                      |      |                 |               |
|        |          | <b>Type</b>                          |      |                 |               |

Tab. 79: Heartbeat monitoring

#### Value ranges

- Node ID: 0 ... 127
- Heartbeat timeout: 0 ... 65535 (in ms)

Example

| Command                      | Description                                                    |
|------------------------------|----------------------------------------------------------------|
| r 0x1016 0                   | Read number of node IDs that can be monitored.                 |
| w 0x1016 1 4 0x007F03e8      | Set first node ID to be monitored to 127 with timeout 1000 ms. |
| – 1 = first entry            |                                                                |
| – 4 = 4 bytes (U32)          |                                                                |
| – 00 = reserved              |                                                                |
| – 7F = 127 (node ID)         |                                                                |
| – 3e8 = 1000 (timeout in ms) |                                                                |
| r 0x1016 1                   | Read first configuration in first entry.                       |

Tab. 80: Heartbeat Monitoring - Example

8.11 Current control with PID controller

The individual P, I and D controllers usually have the following characteristics:

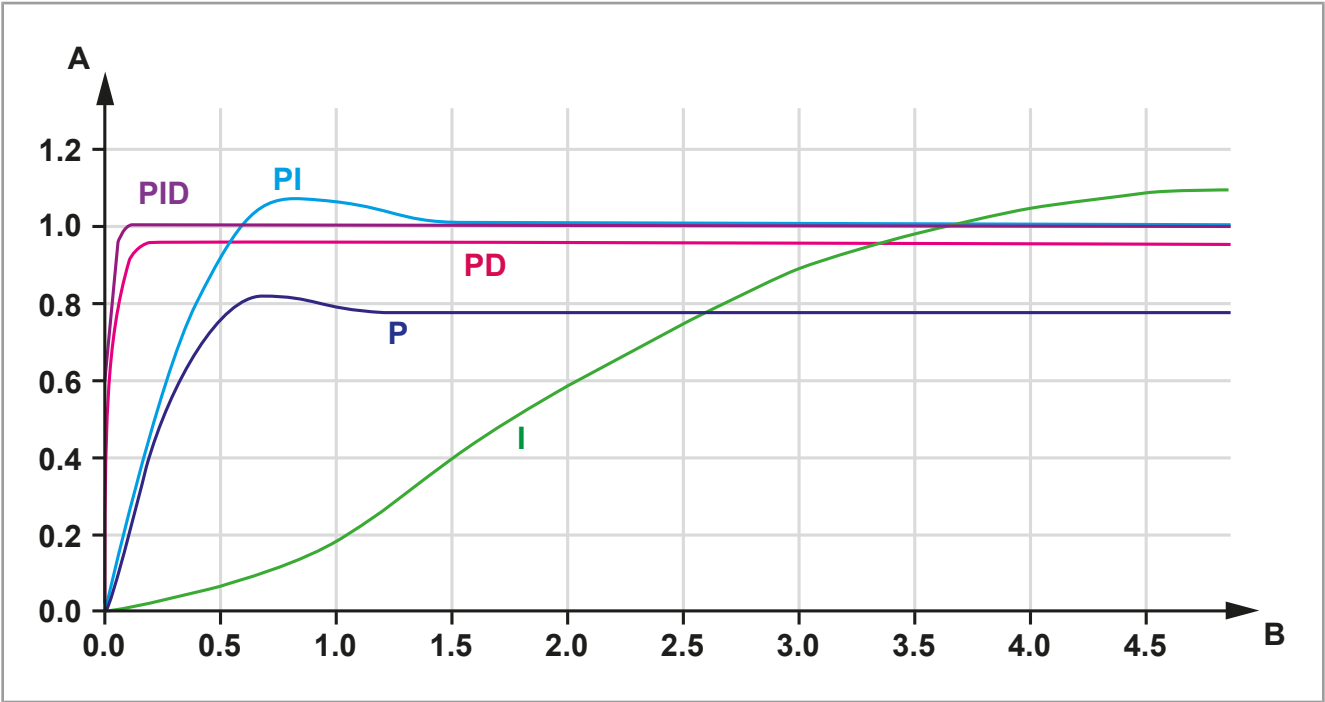


Fig. 15: Comparison of controller types in a control loop

|   |               |
|---|---------------|
| A | Step response |
| B | Time          |

8.11.1 Test scenario


The PID controller was tested on the JXM-IO-EX35 under the following conditions:

| Condition      | Description |                                       |
|----------------|-------------|---------------------------------------|
| Output         | 1 kHz PWM   |                                       |
| Control period | 10 ms       |                                       |
| Load           | Inductive   | An unspecified valve solenoid         |
| VBAT           | 24 V        | In case of a short circuit 4.8 A ~5 Ω |

Tab. 81: General conditions of the test scenario

JetSym was used to set up a test scenario in which the setpoint switches back and forth between 0.3 A and 0.7 A.


**Closed-loop control parameters:  $P = 100,000$ ,  $I = 0$ ,  $D = 0$ , Measurements: blue = setpoint, red = actual value**

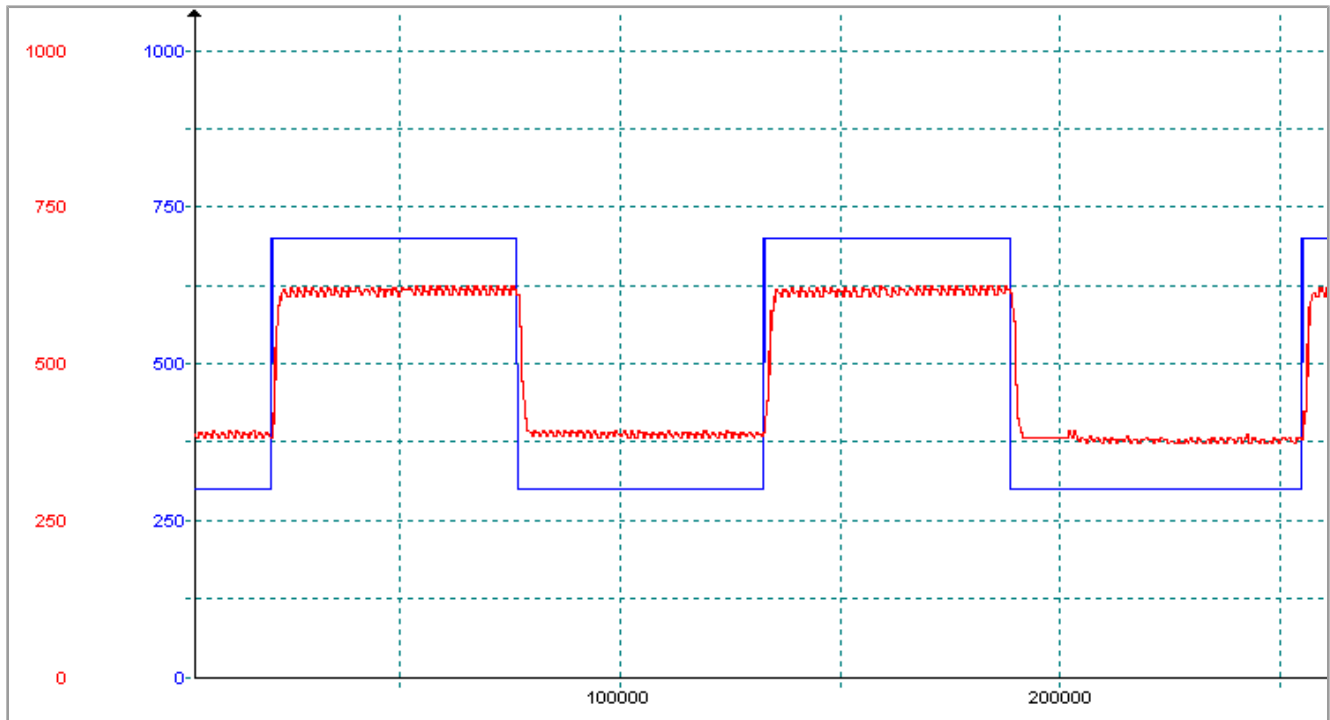

**Fig. 16:** Test scenario with the control parameters  $P = 100,000$ ,  $I = 0$ ,  $D = 0$

The P controller works well with this value. However, the setpoint is not reached, which corresponds to the typical behavior of a P controller (see [Current control with PID controller \[► 64\]](#)).


**Closed-loop control parameters:  $P = 100,000$ ,  $I = 5,000$ ,  $D = 0$ , Measurements: blue = setpoint, red = actual value**

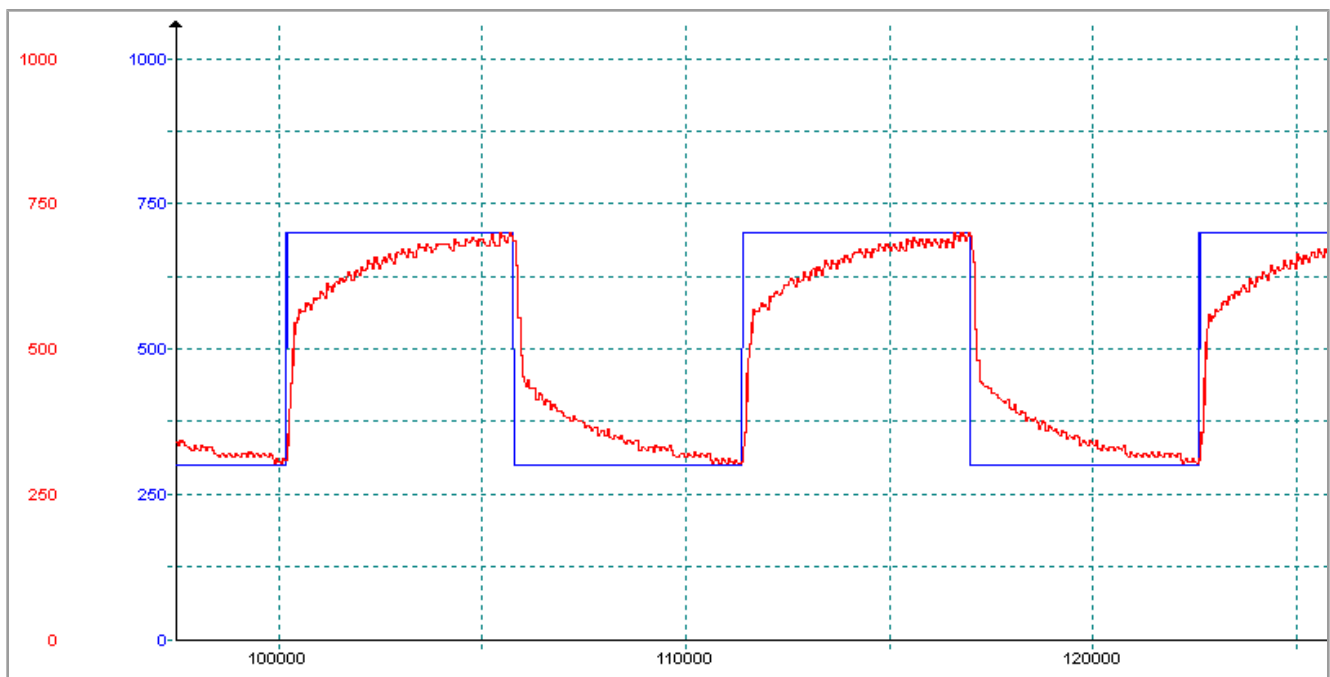

**Fig. 17:** Test scenario with the control parameters  $P = 100,000$ ,  $I = 5,000$ ,  $D = 0$

The I controller also works satisfactorily, the setpoint is reached with this setting.


**Closed-loop control parameters:  $P = 100,000$ ,  $I = 5,000$ ,  $D = 400$ , Measurements: blue = setpoint, red = actual value**

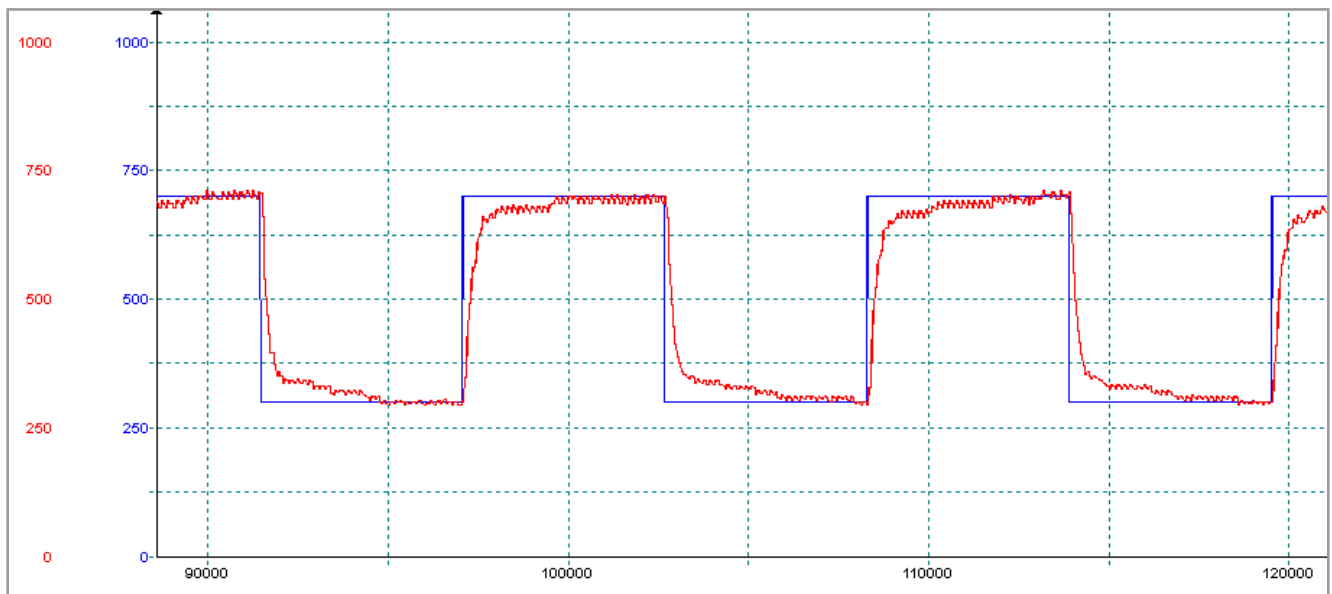

**Fig. 18:** Test scenario with the control parameters  $P = 100,000$ ,  $I = 5,000$ ,  $D = 400$

The D controller causes the actual value to approach the setpoint more quickly.

**Closed-loop control parameters:  $P = 100,000$ ,  $I = 10,000$ ,  $D = 400$ , Measurements: blue = setpoint, red = actual value**

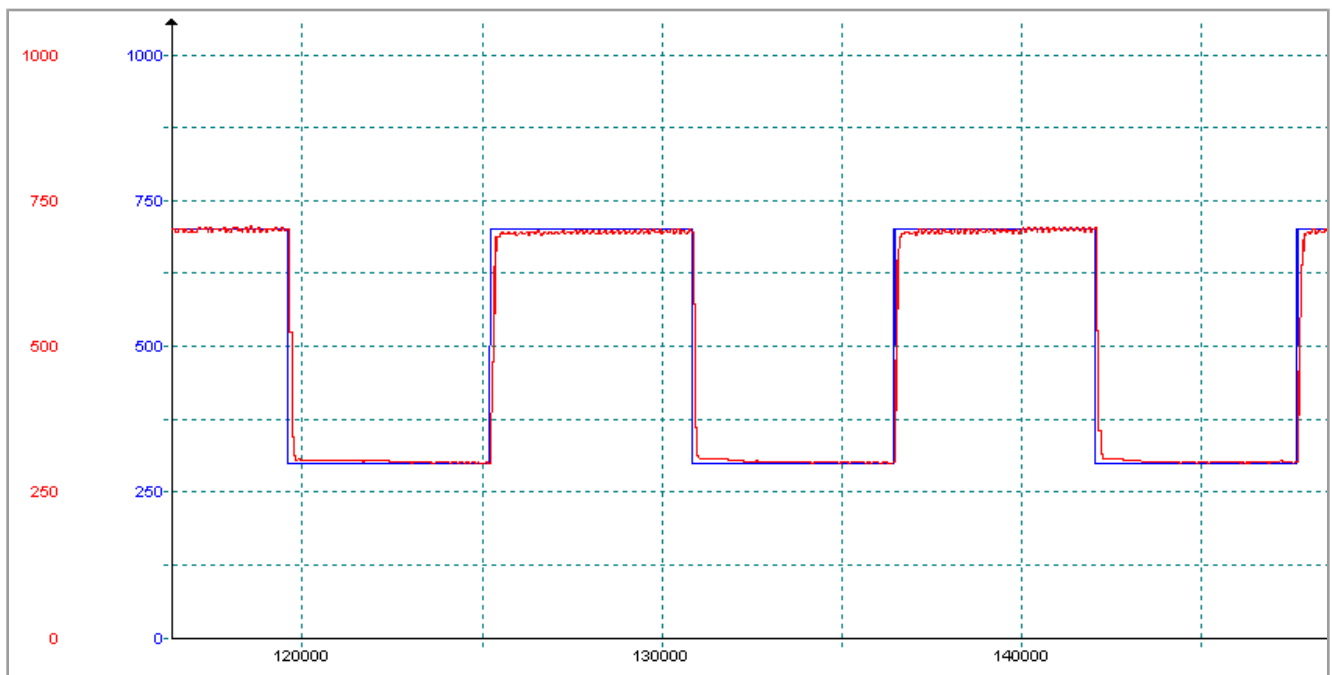

**Fig. 19:** Test scenario with the control parameters  $P = 100,000$ ,  $I = 10,000$ ,  $D = 400$

In this example, the period of the setpoint signal was selected with approx. 10 ms for illustrative purposes. For fast control, the P value should be increased and the sampling time reduced to 5 ms. Settling times  $< 50$  ms can be achieved.

### 8.11.2 Current measurement at the PWMi\_H3\_X outputs

The current measurement at the PWMi\_H3\_X outputs is implemented via shunt resistor. The measuring amplifier has a low-pass filter with  $R * C = 1 \text{ ms}$ . This low-pass filter provides an integral component.

The arithmetic mean is measured. The CPU measures the current only midway through the turn-on time of the PWM signal. Since there is no calculation of the ratio between turn-on time and turn-off time, an integral component is necessary to ensure maximum reading correctness.

Usually valves already have a good average of the load current due to their self-inductance. Purely resistive loads can be operated on the controller if the PWM frequency is set to 1 kHz. The low-pass filter mentioned above is provided for this purpose. For lower frequencies (e.g. 100 Hz) the current measurement at purely resistive loads is too inaccurate.

## 8.12 Dither technology for controlling hydraulic valves

Typically, PWM signals of 100 Hz ... 200 Hz are used to control proportional hydraulic valves. The low frequency prevents the valve needle from coming to a complete stop and the control works without major hysteresis effects.

If valve control requires higher frequencies (1 kHz), the PWM signal can be modulated. This is known as dithering and prevents the needle from coming to a rest. You can set the frequency and amplitude of this dither signal in the JXM-IO-EX35:

- The dither amplitude determines the change of the pulse length of the output signal (max. 50 % of the period length).
- The dither frequency determines how often the change occurs (100 Hz ... 200 Hz).

### Examples


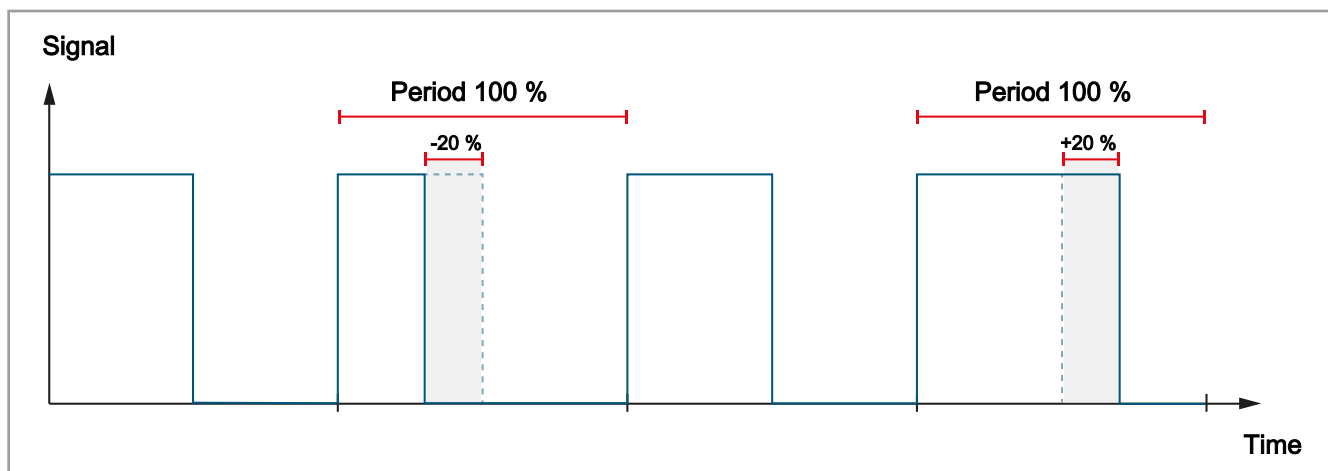


Fig. 20: Dithering example with 50 % O\_DUTY\_CYCLE and 20 % DITHER\_AMP

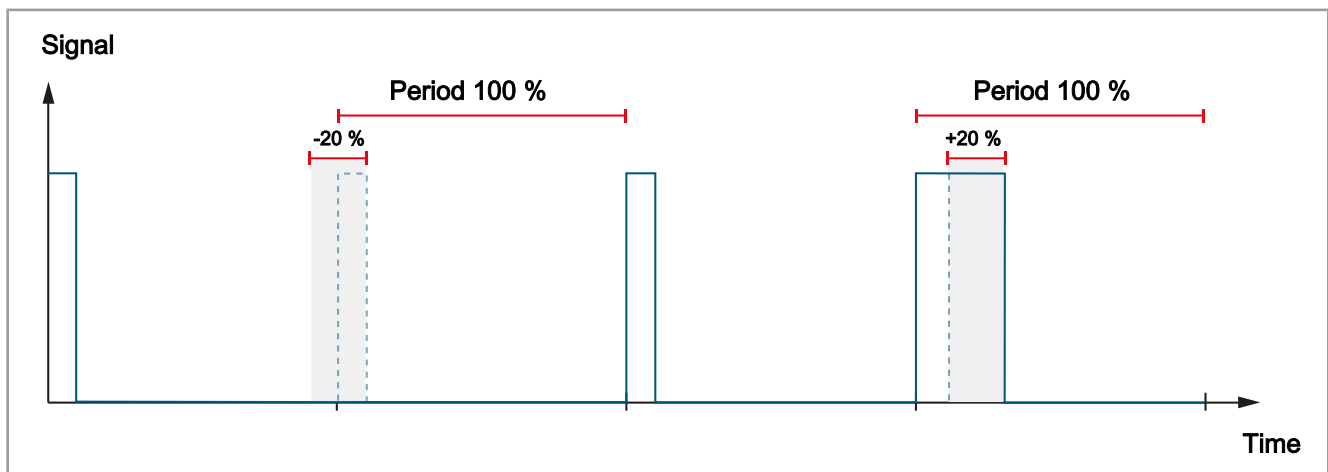

**Fig. 21:** Dithering example with 10 % O\_DUTY\_CYCLE and 20 % DITHER\_AMP

### Automatic adjustment of the dither amplitude

The DITHER\_AMP parameter auto adjusts if the O\_DUTY\_CYCLE and O\_HCURRENT output values near the margins of their range.

The margins are:

- For O\_DUTY\_CYCLE:  $0\text{‰} \leq x \leq 499\text{‰}$  and  $501\text{‰} \leq x \leq 1,000\text{‰}$
- For O\_HCURRENT:  $0\text{ mA} \leq x \leq 1,499\text{ mA}$  and  $1,501\text{ mA} \leq x \leq 3,000\text{ mA}$  at PWMi\_H3

The resulting distance range is 0 % ... 50 %.

If DITHER\_AMP exceeds the distance to the respective margin value, DITHER\_AMP is limited to respective distance.

### **i** Info

If you want to use the dither technology in conjunction with the PID controller, then test the control behavior thoroughly beforehand. The modulation continuously changes the actual value of the controller. If the control does not work satisfactorily, you can try the following:

- Decrease the amplitude of the dither signal.
- Use the averaging filter on the current feedback of the output.
- Adjust the PID parameters.

## 9 Maintenance

This product is maintenance-free. The operation of the product does not require inspection or maintenance efforts.

### 9.1 Repairs

Defective components can cause dangerous malfunctions and compromise safety.

Only the manufacturer is authorized to perform repair work.

It is forbidden to open the product.

#### Product modifications

Modifications and alterations to the product and its functions are not allowed. The manufacturer exempts from liability for any modifications made to the product.

The original parts are specifically designed for the product. Parts and equipment from other manufacturers must not be used.

The manufacturer exempts from liability for any damage resulting from the use of non-original parts and equipment is excluded.

### 9.2 Storage and Shipment

#### Storage

When storing the product, observe the environmental conditions given in chapter "Technical specifications".

#### Shipment and packaging


The product contains electrostatically sensitive components which can be damaged if not handled properly. Damages to the product can impair its reliability.

To protect the product from impact or shock, it must be shipped in its original packaging, or in an appropriate protective ESD packaging.

If the packaging is damaged, inspect the device for any visible damage, and immediately inform your freight forwarder and Bucher Automation AG of the damage caused during shipment. It is strictly forbidden to use a product that has been damaged or dropped.

### 9.3 Return and Disposal

The WEEE icon (crossed-out wheeled bin) says that end users must not dispose of waste electrical and electronic equipment together with household waste, but separately in an appropriate way. Applicable local environmental directives and regulations must be complied with.

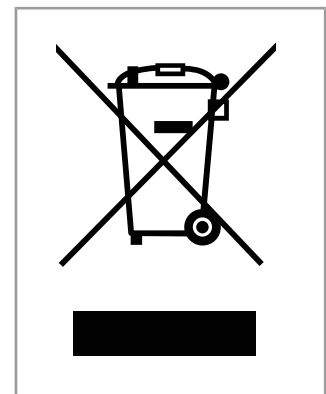

**Fig. 22:** WEEE icon – crossed out wheeled bin

**Disposal options**

To do so, you may either resort to professional disposal service providers or return waste electronics to Bucher Automation AG.

Find detailed information along with the required Return Delivery Form on our [website](#).

**Batteries**

Prior to disposing of waste electronics, remove any batteries where this is possible in a safe and non-destructive way. Dispose of batteries properly.

**Personal data**

It is the responsibility of the end user to delete any personal data stored on waste electric and electronic equipment prior to disposal.

**Packaging material**

The product's packaging materials must not be disposed of together with household waste. Find detailed information on how to return packaging material to Bucher Automation AG on our [website](#).

# 10 Service

## 10.1 Technical Support

If you have any questions, suggestions, or problems, our technical support team is here to assist you with their expertise. You can reach them by phone or through the contact form on our website:

[Technical Support | www.bucherautomation.com](http://www.bucherautomation.com)

Or send us an email:

[support@bucherautomation.com](mailto:support@bucherautomation.com)

Technical Support needs the following information:

- Hardware Revision and Serial Number  
You can find the serial number and hardware revision of your product on the nameplate.
- Operating system version  
You can find the operating system version in index 0x100A.

# 11 Replacement Parts and Accessories

## NOTICE



### Inadequate accessories might cause damage to the product

Parts and equipment from other manufacturers might impede the function of the device and cause damage to the product.

- Only use accessories recommended by Bucher Automation AG.

## 11.1 Accessories

### Info

#### Ordering Accessories

The accessories are not part of the scope of delivery.

Suitable accessories can be obtained from Bucher Automation AG.

| Component                 | Item number |
|---------------------------|-------------|
| Bus termination 120R DT4S | 60885125_00 |
| Node ID connector N01     | 60885131_00 |
| Node ID connector N02     | 60885134_00 |
| Node ID connector N03     | 60885135_00 |
| Node ID connector N04     | 60885136_00 |
| Node ID connector N05     | 60885137_00 |
| Node ID connector N06     | 60885138_00 |
| Node ID connector N07     | 60885139_00 |
| Node ID connector N08     | 60885140_00 |
| Dummy plug DT4 (grey)     | 60885126_00 |

**Tab. 82:** Accessories

## List of figures

|         |                                                                                          |    |
|---------|------------------------------------------------------------------------------------------|----|
| Fig. 1  | Safety relay wiring example.....                                                         | 8  |
| Fig. 2  | Design .....                                                                             | 9  |
| Fig. 3  | LED indicators .....                                                                     | 10 |
| Fig. 4  | Nameplate 1 .....                                                                        | 12 |
| Fig. 5  | Nameplate 2 .....                                                                        | 13 |
| Fig. 6  | Dimension in mm .....                                                                    | 14 |
| Fig. 7  | Graph: Principle of linearization.....                                                   | 20 |
| Fig. 8  | Horizontal mounting orientation.....                                                     | 24 |
| Fig. 9  | Mounting positions, all dimensions in mm .....                                           | 25 |
| Fig. 10 | Connections.....                                                                         | 27 |
| Fig. 11 | Connecting analog 2-wire sensors .....                                                   | 32 |
| Fig. 12 | Connecting digital 2-wire sensors.....                                                   | 33 |
| Fig. 13 | Connecting 3-wire digital sensors.....                                                   | 34 |
| Fig. 14 | Concept and control .....                                                                | 40 |
| Fig. 15 | Comparison of controller types in a control loop .....                                   | 64 |
| Fig. 16 | Test scenario with the control parameters $P = 100,000$ , $I = 0$ , $D = 0$ .....        | 65 |
| Fig. 17 | Test scenario with the control parameters $P = 100,000$ , $I = 5,000$ , $D = 0$ .....    | 65 |
| Fig. 18 | Test scenario with the control parameters $P = 100,000$ , $I = 5,000$ , $D = 400$ .....  | 66 |
| Fig. 19 | Test scenario with the control parameters $P = 100,000$ , $I = 10,000$ , $D = 400$ ..... | 66 |
| Fig. 20 | Dithering example with 50 % $O\_DUTY\_CYCLE$ and 20 % $DITHER\_AMP$ .....                | 67 |
| Fig. 21 | Dithering example with 10 % $O\_DUTY\_CYCLE$ and 20 % $DITHER\_AMP$ .....                | 68 |
| Fig. 22 | WEEE icon – crossed out wheeled bin.....                                                 | 69 |

# List of tables

|         |                                                    |    |
|---------|----------------------------------------------------|----|
| Tab. 1  | Connection X2 – VBAT_IN .....                      | 8  |
| Tab. 2  | Mechanical specifications .....                    | 15 |
| Tab. 3  | Output driver supply .....                         | 15 |
| Tab. 4  | ECU power supply .....                             | 15 |
| Tab. 5  | Ground reference .....                             | 16 |
| Tab. 6  | Environmental conditions .....                     | 16 |
| Tab. 7  | Pulses ISO 7637-2 .....                            | 16 |
| Tab. 8  | Pulses ISO 16750-2 .....                           | 17 |
| Tab. 9  | Irradiation as per ISO 11452 .....                 | 17 |
| Tab. 10 | RFD current feed as per ISO 11452-4 .....          | 17 |
| Tab. 11 | Emission CISPR 25 .....                            | 17 |
| Tab. 12 | ESD EN 61000-4-2 .....                             | 17 |
| Tab. 13 | Outputs PWMi_H3_1 ... PWMi_H3_4 .....              | 18 |
| Tab. 14 | Sensor output VEXT_SEN .....                       | 18 |
| Tab. 15 | VREF_10V .....                                     | 19 |
| Tab. 16 | Outputs PWMi_HL12_1 ... PWMi_HL12_8 .....          | 19 |
| Tab. 17 | Analog inputs .....                                | 21 |
| Tab. 18 | Digital inputs DI_1 ... DI_8 .....                 | 22 |
| Tab. 19 | Configuration inputs CFG1 ... CFG2 .....           | 22 |
| Tab. 20 | Requirements for the Mounting Surface .....        | 24 |
| Tab. 21 | Fastening material .....                           | 25 |
| Tab. 22 | Connection X1 – VBAT_OUT .....                     | 27 |
| Tab. 23 | Connection X2 – VBAT_IN .....                      | 28 |
| Tab. 24 | Connection X4 – CAN .....                          | 28 |
| Tab. 25 | Connection X5 – CAN .....                          | 28 |
| Tab. 26 | Connection X6 – AI1 ... AI_2 .....                 | 28 |
| Tab. 27 | Connection X7 – AI3 ... AI_4 .....                 | 28 |
| Tab. 28 | Connection X8 – DI_1 ... DI_2 .....                | 29 |
| Tab. 29 | Connection X9 – DI_3 ... DI_4 .....                | 29 |
| Tab. 30 | Connection X10 – PWMi_H3_1 ... PWMi_H3_2 .....     | 29 |
| Tab. 31 | Connection X11 – PWMi_H3_3 ... PWMi_H3_4 .....     | 29 |
| Tab. 32 | Connection X12 – CFG .....                         | 29 |
| Tab. 33 | Connection X13 – PWMi_H3_5 ... PWMi_H3_6 .....     | 30 |
| Tab. 34 | Connection X14 – PWMi_HR3_13 ... PWMi_HR3_14 ..... | 30 |
| Tab. 35 | Connection X15 – PWMi_H3_15 ... PWMi_H3_16 .....   | 30 |
| Tab. 36 | Connection X16 – PWMi_H3_7 ... PWMi_H3_8 .....     | 30 |
| Tab. 37 | Connection X17 – PWMi_H3_9 ... PWMi_H3_10 .....    | 30 |
| Tab. 38 | Connection X18 – PWMi_HL12_1 ... PWMi_HL12_2 ..... | 31 |
| Tab. 39 | Connection X19 – PWMi_HL12_3 ... PWMi_HL12_4 ..... | 31 |
| Tab. 40 | Connection X20 – PWMi_H3_11 ... PWMi_H3_12 .....   | 31 |
| Tab. 41 | Connection X21 – CAN2 .....                        | 31 |

|         |                                                               |    |
|---------|---------------------------------------------------------------|----|
| Tab. 42 | Abbreviations used in this document.....                      | 31 |
| Tab. 43 | Connection X10 – AI_1 ... AI_2.....                           | 33 |
| Tab. 44 | Connection X6 – DI_1 ... DI_2.....                            | 33 |
| Tab. 45 | Connection X7 – DI_3 ... DI_4.....                            | 34 |
| Tab. 46 | Connection X6 – DI_1 ... DI_2.....                            | 35 |
| Tab. 47 | Connection X10 – AI_1 ... AI_2.....                           | 35 |
| Tab. 48 | Device information.....                                       | 36 |
| Tab. 49 | EDS information.....                                          | 37 |
| Tab. 50 | Electronic nameplate.....                                     | 37 |
| Tab. 51 | JetEasyDownload parameters.....                               | 38 |
| Tab. 52 | Supported ports and interfaces - Overview.....                | 40 |
| Tab. 53 | Subindices for accessing parameters, values and statuses..... | 41 |
| Tab. 54 | Available interfaces, parameters, values and statuses.....    | 42 |
| Tab. 55 | Input values.....                                             | 47 |
| Tab. 56 | Output values.....                                            | 48 |
| Tab. 57 | Status.....                                                   | 51 |
| Tab. 58 | CFG connector (X12) pinout.....                               | 52 |
| Tab. 59 | CFG pin jumpers.....                                          | 52 |
| Tab. 60 | Diagnostic information.....                                   | 53 |
| Tab. 61 | Status information.....                                       | 53 |
| Tab. 62 | Saving settings to EEPROM.....                                | 54 |
| Tab. 63 | Resetting the settings to their default values.....           | 54 |
| Tab. 64 | System parameters.....                                        | 55 |
| Tab. 65 | Validity of a PDO.....                                        | 55 |
| Tab. 66 | RPDO communication parameters.....                            | 56 |
| Tab. 67 | TPDO communication parameters.....                            | 57 |
| Tab. 68 | RPDO mapping table.....                                       | 57 |
| Tab. 69 | TPDO mapping table.....                                       | 57 |
| Tab. 70 | Mapping entry U32.....                                        | 58 |
| Tab. 71 | Resolution of the encoder signals.....                        | 60 |
| Tab. 72 | Input values for ENCI_PNP.....                                | 61 |
| Tab. 73 | Supported NMT commands.....                                   | 61 |
| Tab. 74 | Byte values of Emergency objects.....                         | 62 |
| Tab. 75 | Byte values of the error memory.....                          | 62 |
| Tab. 76 | Subindexes of the error memory.....                           | 62 |
| Tab. 77 | Emergency Error Codes.....                                    | 62 |
| Tab. 78 | Index of the heartbeat message.....                           | 63 |
| Tab. 79 | Heartbeat monitoring.....                                     | 63 |
| Tab. 80 | Heartbeat Monitoring - Example.....                           | 64 |
| Tab. 81 | General conditions of the test scenario.....                  | 64 |
| Tab. 82 | Accessories.....                                              | 72 |

---

**Bucher Automation AG**

Thomas-Alva-Edison-Ring 10  
71672 Marbach/Neckar, Germany  
T +49 7141 2550-0  
[info@bucherautomation.com](mailto:info@bucherautomation.com)



[www.bucherautomation.com](http://www.bucherautomation.com)